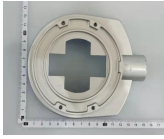 
 


RS4508


Spare Part No.	Part No.	Part Name	Easy Damage	Part Picture
RS4508-SP-1	AA043000001	Rating Label	No	
RS4508-SP-2	AA043000002	St4.2×19 Screw	No	
RS4508-SP-3	AA043000003	M4×10 Screw	No	
RS4508-SP-4/16	AA043000007	Right/Left Housing	No	
RS4508-SP-5	AA043000008	Screw	No	
RS4508-SP-6/7	AA043000009	Ancillary Handel(Right/Left)	No	
RS4508-SP-8	AA043000011	Knob	No	
RS4508-SP-9	AA043C00012	Carbon Brush	No	
RS4508-SP-10	AA043W00014	Switch	No	

RS4508-SP-11	AA043000015	Capacitor	No	
RS4508-SP-12	AA043000016	St4.2×14 Screw	No	
RS4508-SP-13	AA043000017	Flange	No	
RS4508-SP-14	AA043000018	Cord Guard	No	
RS4508-SP-15	AA043000019	Power Cord 2M	No	
RS4508-SP-17	AA043S00023	Stator	No	
RS4508-SP-18	A1010608000	Bearing 608	No	
RS4508-SP-19	AA043R00025	Rotor	No	

RS4508-SP-20	A1010629000	Bearing 629	No	
RS4508-SP-21	AA043000027	Fan	No	
RS4508-SP-22	AA043000028	Base Of Ball Bearing	No	
RS4508-SP-23	A1016002000	Ball Bearing6002/C3-2Rz	No	
RS4508-SP-24	AA043000030	Gasket	No	
RS4508-SP-25	AA043000031	Spring Washer	No	
RS4508-SP-26	AA043000032	M5×18 Screw	No	
RS4508-SP-27	AA043000033	Base	No	

RS4508-SP-28	AA043000034	Dust box	No	
RS4508-SP-29	AA043000035	Cover	No	
RS4508-SP-30	AA043000036	Cover Plate	No	
RS4508-SP-31	AA043000037	M4×12 Screw	No	
RS4508-SP-32	AA043000038	Base Plate(150MM)	No	
RS4508-SP-33	AA043000039	M5×12 Screw	No	
RS4508-SP-34	AA043000040	Sanding Paper	No	

 RS4508

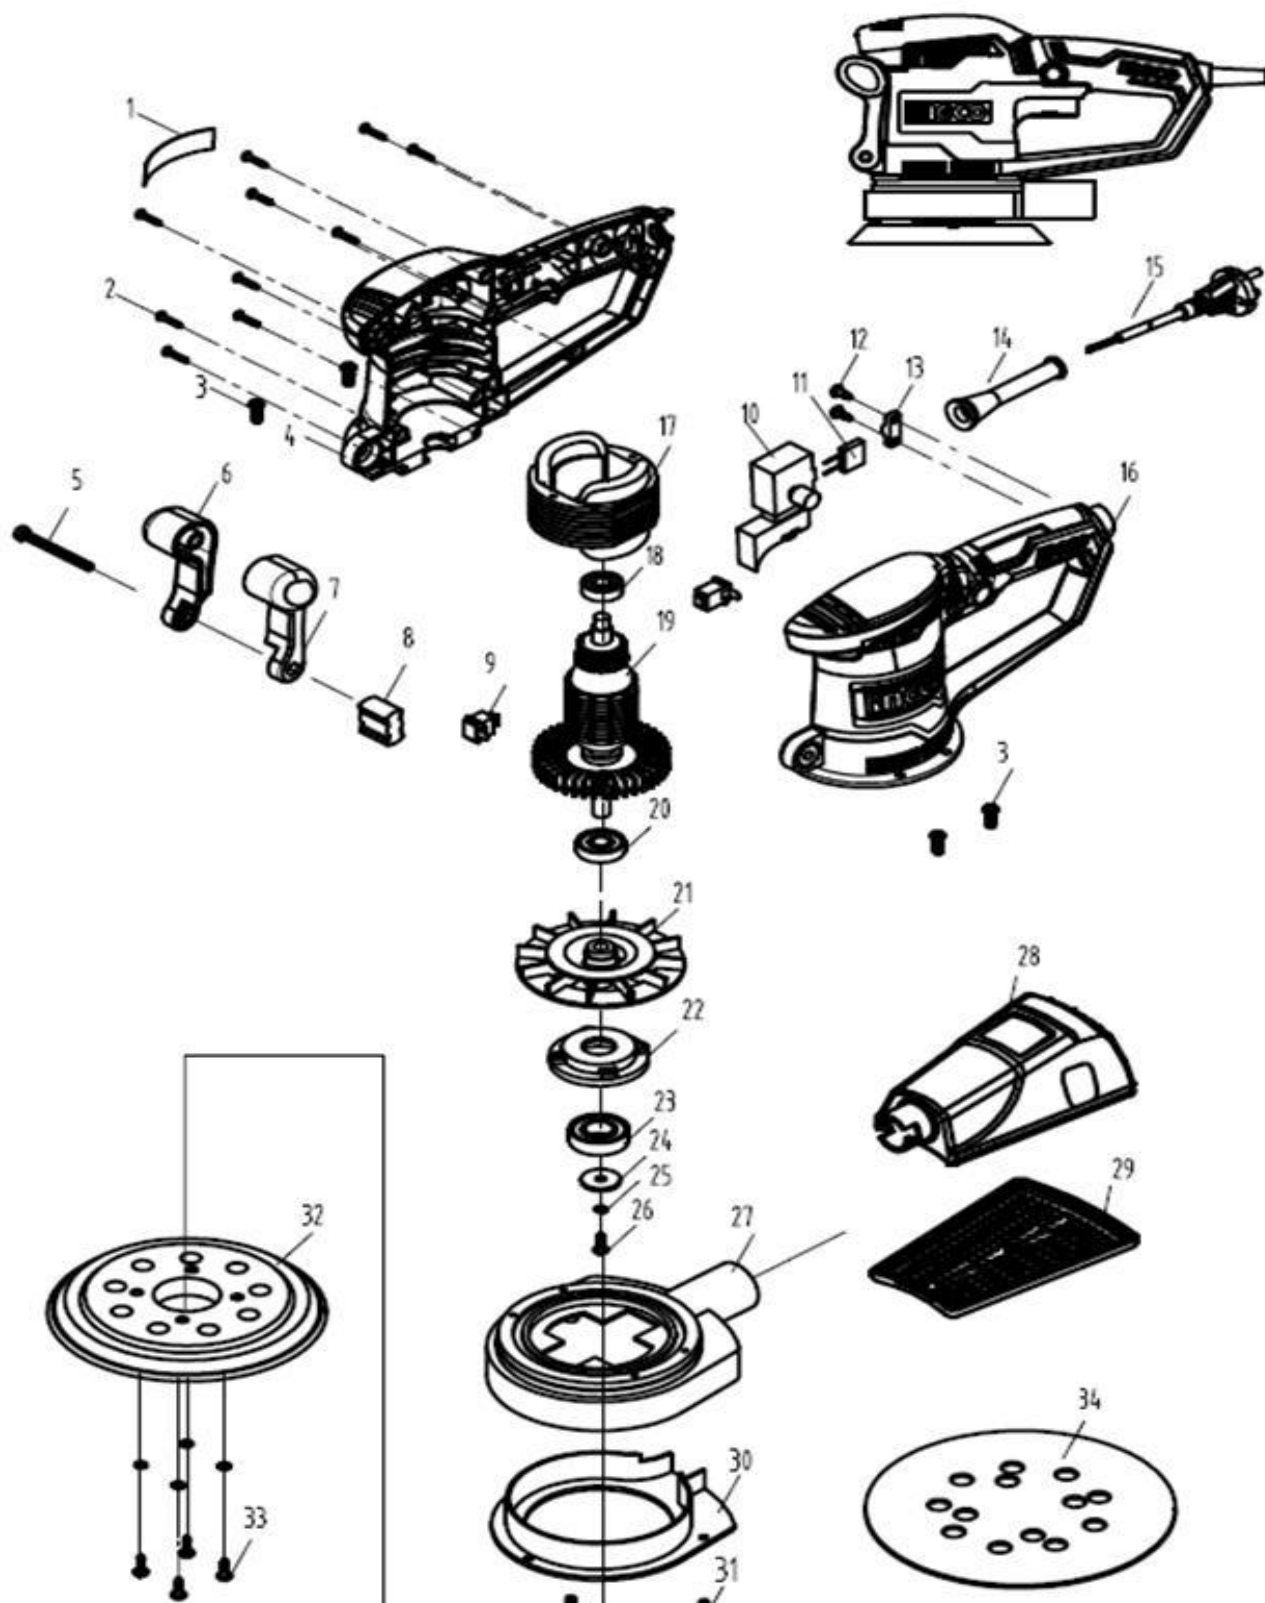

0.000



0.000

