

RH150028

Spare Part No.	Part No.	Part Name	Easy Damage	Part Picture
RH150028-SP-T.O.C.V	TS00001449	The oil cap wrench	No	
RH150028-SP-1	AA021000216	Rubber Head	No	
RH150028-SP-1-25	DD00002745	Front Assembly Module	No	
RH150028-SP-2	AA021000217	Steel Ring17.5*2	No	
RH150028-SP-3	AA000000079	Steel Frame	No	
RH150028-SP-4	AA021000219	Spring 30.2*1.8*76	No	
RH150028-SP-5	AA021000220	Inner Hexogon Screw M5*25	No	
RH150028-SP-5-7	AA021001266	Inner Hexogon Screw M5*25	No	
RH150028-SP-6	AA021000221	Spring Washer 5	No	

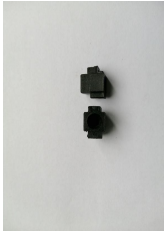 
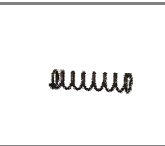 
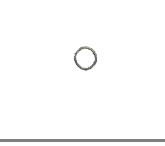 
RH150028-SP-7	AA021000222	Washer 5	No	
RH150028-SP-8	AA021000828	Cylinder house	No	
RH150028-SP-9	AA021000224	Oil Seal Fb35*51*6	No	
RH150028-SP-10	AA021000231	Ring 35	No	
RH150028-SP-11	AA021000225	Big Washer 45*54.5*1	No	
RH150028-SP-12	A1016190700	bearing 61907-RZ	No	
RH150028-SP-13	AA021000227	Stell Ball 7.14	No	
RH150028-SP-14-F	AA021000226	Teleflex	No	
RH150028-SP-14	DD00003100	teleflex	No	

RH150028-SP-15	AA021000228	X-ring	No	
RH150028-SP-16	AA021000229	X-ring 13*1*4	No	
RH150028-SP-16/17	DD00005134	Impact hammer components	No	
RH150028-SP-17	AA021000230	Punch Hammer	No	
RH150028-SP-18	AA021000232	Stell Ball 7.94	No	
RH150028-SP-19	AA021000233	Cylinder	No	
RH150028-SP-20	AA021000234	Flat Key3*2.5*18	No	
RH150028-SP-21	AA021000235	Plastic Range Ring 47*55*7	No	
RH150028-SP-22	AA021000829	Cylinder Case 50*55*47	No	

RH150028-SP-23	AA021000237	Big Spring33.5*3.5*76	No	
RH150028-SP-24	AA021000238	Gear 31teeth	No	
RH150028-SP-25	AA021000239	Ring28*1.6	No	
RH150028-SP-26	AA021000241	O-ring 19*3.1	No	
RH150028-SP-27	AA021000240	Rammer	No	
RH150028-SP-28	AA021000278	Ring 47	No	
RH150028-SP-29	AA021000280	Bearing 30*47*9	No	
RH150028-SP-30	AA021000243	Piston25x27	No	

RH150028-SP-31	AA021000242	Piston Pin	No	
RH150028-SP-32	AA021000244	Connecting Rod	No	
RH150028-SP-32/33	AA02101265	Connecting Rod/Steel Sleeve	No	
RH150028-SP-34	AA021000830	Screw St4.8*50	No	
RH150028-SP-35	AA021000831	Screw m5*20	No	
RH150028-SP-36	AA021000832	Oil Cover	No	
RH150028-SP-37	AA021000285	O-ring 31.5*2	No	
RH150028-SP-38	AA021000833	Gear Box	No	
RH150028-SP-39	AA021000704	Spring 10.5X1.5X26	No	

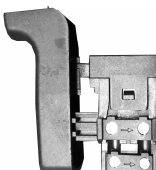 
RH150028-SP-40	AA021000703	Vibration Reduction Set	No	
RH150028-SP-41	AA021000705	Vibration Damper Plate	No	
RH150028-SP-42	AA021000706	Bolt M8X35	No	
RH150028-SP-43	AA021000287	Screw ST3.9*16	No	
RH150028-SP-44/45	AA021000834	Gear box left/right cover	No	
RH150028-SP-46	AA021000836	O-ring	No	
RH150028-SP-47	AA021000837	Knob axle	No	
RH150028-SP-48	AA021000838	Washer	No	
RH150028-SP-49	AA021000839	Knob assembly	No	
RH150028-SP-50-52	AA021000840	Flat gasket/Spring washer/S	No	

RH150028-SP-53	AA021000843	Lock	No	
RH150028-SP-54	AA021000844	Spring 0.6*4.5*17.5	No	
RH150028-SP-55	AA021000259	Oil Seal FB19*28*4.5	No	
RH150028-SP-56	AA021000260	Small Gear	No	
RH150028-SP-56-66	AA021001131	Gears Ass'Y	No	
RH150028-SP-57	AA021000261	Washer	No	
RH150028-SP-58	A1016002000	Ball Bearing6002/C3-2Rz	No	
RH150028-SP-59	AA021000262	Washer	No	

RH150028-SP-60	AA021G00845	Gear	No	
RH150028-SP-61	AA021000846	Ball	No	
RH150028-SP-62	AA021000847	Dead plate	No	
RH150028-SP-63	AA021000848	Washer	No	
RH150028-SP-64	AA021000849	Active Plate	No	
RH150028-SP-65	AA021000850	Spring	No	
RH150028-SP-66	AA021000851	Screw	No	
RH150028-SP-67	A1010627000	Ball Bearing 627	No	
RH150028-SP-68	AA021000269	Crankshaft	No	

RH150028-SP-69	A1016003000	Bearing6002	No	
RH150028-SP-70	AA021000271	Ring 17	No	
RH150028-SP-71	AA021000270	Ring 35	No	
RH150028-SP-72	AA021G00272	Gear	No	
RH150028-SP-73	AA021000273	Spring 33*1.2	No	
RH150028-SP-74	AA021000277	Key Pin5*5*22	No	
RH150028-SP-75	AA021000274	Pin 8*18.7	No	
RH150028-SP-76	AA021000275	Bearing	No	
RH150028-SP-77	AA021000276	Steel Sleeve	No	

RH150028-SP-78	AA021000852	Rubber Column	No	
RH150028-SP-79	AA021000853	Ballφ4	No	
RH150028-SP-80	AA021000854	Middle Cover	No	
RH150028-SP-81	AA021000855	O-Ring W8.5*2	No	
RH150028-SP-82	AA021000856	Dial Twist	No	
RH150028-SP-83	A1016001000	Ball Bearing 6001/C3-Zrs	No	
RH150028-SP-84	AA021000879	Bearing Pressing Plate	No	
RH150028-SP-85	AA021000880	Screw M4*14	No	
RH150028-SP-86	AA021000857	Fan Guide	No	
RH150028-SP-87	AA021R00858	Rotor	No	
RH150028-SP-88	AA021000859	Screw St4.8*60	No	

RH150028-SP-89	AA021S00860	Stator	No	
RH150028-SP-90	A1010608000	Bearing 608	No	
RH150028-SP-91	AA021000861	Motor housing	No	
RH150028-SP-92	AA021000862	Carbon brush holder Coil sp	No	
RH150028-SP-93	AA021C00863	Carbon Brush	No	
RH150028-SP-94	AA021000864	Screw St3.9X12	No	
RH150028-SP-95	AA021000865	Back cover	No	
RH150028-SP-96	AA021000866	Screw M8*50	No	
RH150028-SP-98/99	AA021000868	Left/Right Handle	No	
RH150028-SP-100	AA021W00870	Switch	No	

RH150028-SP-101	AA021000290	Capactitor	No	
RH150028-SP-103	AA021000871	Locknut	No	
RH150028-SP-104	AA021000292	Cable Board	No	
RH150028-SP-105	AA021000881	Cable sheath	No	
RH150028-SP-106	A1002000027	Cable 2*1.0 2m	No	
RH150028-SP-107	AA021000872	Screw	No	
RH150028-SP-108	AA021000873	Bracket	No	
RH150028-SP-109	DD00005665	Auxiliary handle	No	
RH150028-SP-110	AA021000874	Hoop	No	

RH150028

