

Spare Part No.	Part No.	Part Name	Easy Damage	Part Picture
RS8008-SP-R.S.A	AA022000028	Reciprocating shaft Ass'y	No	
RS8008-SP-S.B	TS00002919	Saw blade	No	
RS8008-SP-BS	AAAC0000833	Power cord 2 * 0.75mm ² 2m	No	
RS8008-SP-1	DD00008134	Power cable 2M	No	
RS8008-SP-2	AA022000001	Cord protector	No	
RS8008-SP-3	AA022000002	Capacitor	No	
RS8008-SP-4	AA022W00003	Switch	Yes	
RS8008-SP-5	AA022000004	O Ring	No	
RS8008-SP-6	AA022000005	Inductance	No	

RS8008-SP-7	AA022C00006	Carbon Brush	Yes	
RS8008-SP-8	AA022000007	Top Brush holder-Spring	No	
RS8008-SP-9	AA022000008	Top Brush holder	No	
RS8008-SP-10	AA022000009	Screw	No	
RS8008-SP-11	AA022000010	cord clamp	No	
RS8008-SP-12	AA022000011	Bottom Brush holder	No	
RS8008-SP-13	AA022000012	Bottom Brush holder-spring	No	
RS8008-SP-14	AA022S00013	Stator	Yes	
RS8008-SP-15	A1010607000	BEARING 607	No	
RS8008-SP-16	AA022R00014	Rotor	Yes	
RS8008-SP-16-1	AA022000015	fan	No	

RS8008-SP-16/27	DD00003653	Rotor&Gear	Yes	
RS8008-SP-17	AA022000016	circlips	No	
RS8008-SP-18	AA022000017	washers	No	
RS8008-SP-19	A1016000000	bearing 6000	No	
RS8008-SP-20	AA022000018	Nut M8	No	
RS8008-SP-21	AA022000019	O Ring	No	
RS8008-SP-22	DD00002783	Bearing 6000	No	
RS8008-SP-23	AA022000020	limit set of	No	
RS8008-SP-24	AA022000021	circlips for hole	No	

RS8008-SP-25	AA022000022	Gear box	No	
RS8008-SP-26	AA022000023	Gear shaft	No	
RS8008-SP-27	AA022G00111	Gear	No	
RS8008-SP-28	AA022000025	dowel Pin	No	
RS8008-SP-29	AA022000026	Needle bearing	No	
RS8008-SP-30	AA022000027	Gear press	No	
RS8008-SP-31	AA022000028	Reciprocating shaft Ass'y	No	
RS8008-SP-32	AA022000029	Orented plate	No	

RS8008-SP-33	DD00002784	Screw with washer	No	
RS8008-SP-34	AA022000033	screw	No	
RS8008-SP-34/35	DD00010794	Screw/washers normal series	No	
RS8008-SP-35	AA022000030	plain washers normal series5	No	
RS8008-SP-36	AA022000034	screw	No	
RS8008-SP-37	AA022000035	Support board lock	No	
RS8008-SP-38	AA022000036	screw	No	
RS8008-SP-39	AA022000037	screw	No	
RS8008-SP-40	AA022000038	dowel Pin	No	
RS8008-SP-41	AA022000039	Inner collet	No	
RS8008-SP-42	AA022000040	circlips forshaft	No	
RS8008-SP-43	AA022000041	Out collet	No	
RS8008-SP-44	AA022000042	Spring	No	

RS8008-SP-45	AA022000043	steel ball	No	
RS8008-SP-46	AA022000044	Circle	No	
RS8008-SP-47	AA022000045	circlips forshaft	No	
RS8008-SP-48	AA022000046	dustproof ring cover	No	
RS8008-SP-49	AA022000047	dustproof ring	No	
RS8008-SP-50	AA022000048	bearing	No	
RS8008-SP-51	DD00002785	Screw	No	
RS8008-SP-52/54	AA022000058	right housing/left housing	No	
RS8008-SP-53	AA022000050	namep late	No	
RS8008-SP-55	AA022000053	Special Spanner	No	
RS8008-SP-56	AA022000054	blade	No	

