 
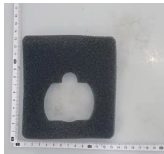 


HPWR12008

Spare Part No.	Part No.	Part Name	Easy Damage	Part Picture
HPWR12008-SP-V.A	TS00000598	valve assembly	No	
HPWR12008-SP-B.P	TS00000740	Bubble pot of	No	
HPWR12008-SP-M.S	TS00000844	Micro Switch	No	
HPWR12008-SP-C.B	TS00000775	Carbon brush	No	
HPWR12008-SP-E-22	TS00000797	Inlet valve	No	
HPWR12008-SP-ROTOR	TS00001690	rotor	No	
HPWR12008-SP-STATOR	TS00001691	stator	No	
HPWR12008-SP-E-2	QX00000350	peach shape ring	No	
HPWR12008-SP-E-3	QX00000351	gear box kit6.5°	No	
HPWR12008-SP-E-4	QX00000352	gear box	No	
HPWR12008-SP-E-5	QX00000353	wobble plate6.5	No	
HPWR12008-SP-E-6	QX00000354	washer Φ 8	No	
HPWR12008-SP-E-7	QX00000355	ST screw M8*20/ROHS		
HPWR12008-SP-E-8	TS00000800	Plain thrust bearing	No	
HPWR12008-SP-E-9	QX00000356	ST5.5*20	No	
HPWR12008-SP-E-10	QX00000357	ST screw M6*55/ROHS	No	
HPWR12008-SP-E-11	QX00000358	spring washer Φ 6-ROHS	No	
HPWR12008-SP-E-12	QX00000359	Φ 6-ROHS	No	
HPWR12008-SP-E-14	QX00000361	pump head kit	No	
HPWR12008-SP-E-15	QX00000362	ST screw M6*8	No	
HPWR12008-SP-E-16	QX00000363	YLP11.2 check valve assy	No	
HPWR12008-SP-E-17	QX00000364	O-ring 9.8X1.9	No	
HPWR12008-SP-E-18	QX00000365	AL-valve plug	No	
HPWR12008-SP-E-19	QX00000366	pump head	No	
HPWR12008-SP-E-20	QX00000367	O-ring 6X2	No	
HPWR12008-SP-E-21	TS00000798	Y-Ring 10X16	No	
HPWR12008-SP-E-23	QX00000368	YLP11 piston guider kit	No	
HPWR12008-SP-E-24	TS00000902	Sealing Base	No	
HPWR12008-SP-E-25	TS00000796	oil seal	No	
HPWR12008-SP-E-26	QX00000369	inlte tube	No	


HPWR12008-SP-E-27	QX00000370	u-pin	No	
HPWR12008-SP-E-28	QX00000371	O-ring 9.5X2.5	No	
HPWR12008-SP-E-29	TS00000598	valve assembly	No	
HPWR12008-SP-E-30	QX00000372	YLP11 piston guider	No	
HPWR12008-SP-E-31	QX00000373	chief valve assy	No	
HPWR12008-SP-E-32	TS00000901	Plunger Assembly	No	
HPWR12008-SP-E-33	QX00000374	O-ring 60*2.1	No	
HPWR12008-SP-E-34	TS00000844	Micro Switch	No	
HPWR12008-SP-E-35	QX00000375	fan cover	No	
HPWR12008-SP-1	QX00000075	Motor Pump Assy	No	
HPWR12008-SP-2	AD001000377	Switch Knd2 12_2	No	
HPWR12008-SP-3	QX00000076	Hc8050 Merge	No	
HPWR12008-SP-3-A	QX00000348	motor	No	
HPWR12008-SP-3-B	QX00000349	pump	No	
HPWR12008-SP-4	AD001000379	St Screw St3X12 C	No	
HPWR12008-SP-5	AD001000380	Switch Cover	No	
HPWR12008-SP-6	AD001000381	Damping Ring	No	
HPWR12008-SP-7	AD001000382	Rpw120X Front Motor Filter	No	
HPWR12008-SP-8	AD001000383	Motor Cover	No	
HPWR12008-SP-9	AD001000384	Cord Hook	No	
HPWR12008-SP-10	AD001000412	Warning Label	No	

HPWR12008-SP-11	AD001000386	Pressure Hose Assy6510	No	
HPWR12008-SP-13	AD001000388	Cable Seal	No	
HPWR12008-SP-14	A1002000078	Two Cord Power Component	No	
HPWR12008-SP-15	AD001000389	St Screw St4.8X16	No	
HPWR12008-SP-16	AD001000390	Cleaning Pin	No	
HPWR12008-SP-17	AD001000391	Water Outlet Sheath	No	
HPWR12008-SP-18	QX00000104	Rear Housing	No	
HPWR12008-SP-19	QX00000078	Front Housing	No	
HPWR12008-SP-20	QX00000079	Handle	No	
HPWR12008-SP-21	AD001000395	Water Inlet Sheath	No	
HPWR12008-SP-22	AD001000396	Water Inlet Screw	No	
HPWR12008-SP-24	QX00000080	Sector Head Assy	No	
HPWR12008-SP-24/25	QX00000141	Handle Merge&Sector Head	No	
HPWR12008-SP-25	QX00000081	Handle Merge	No	

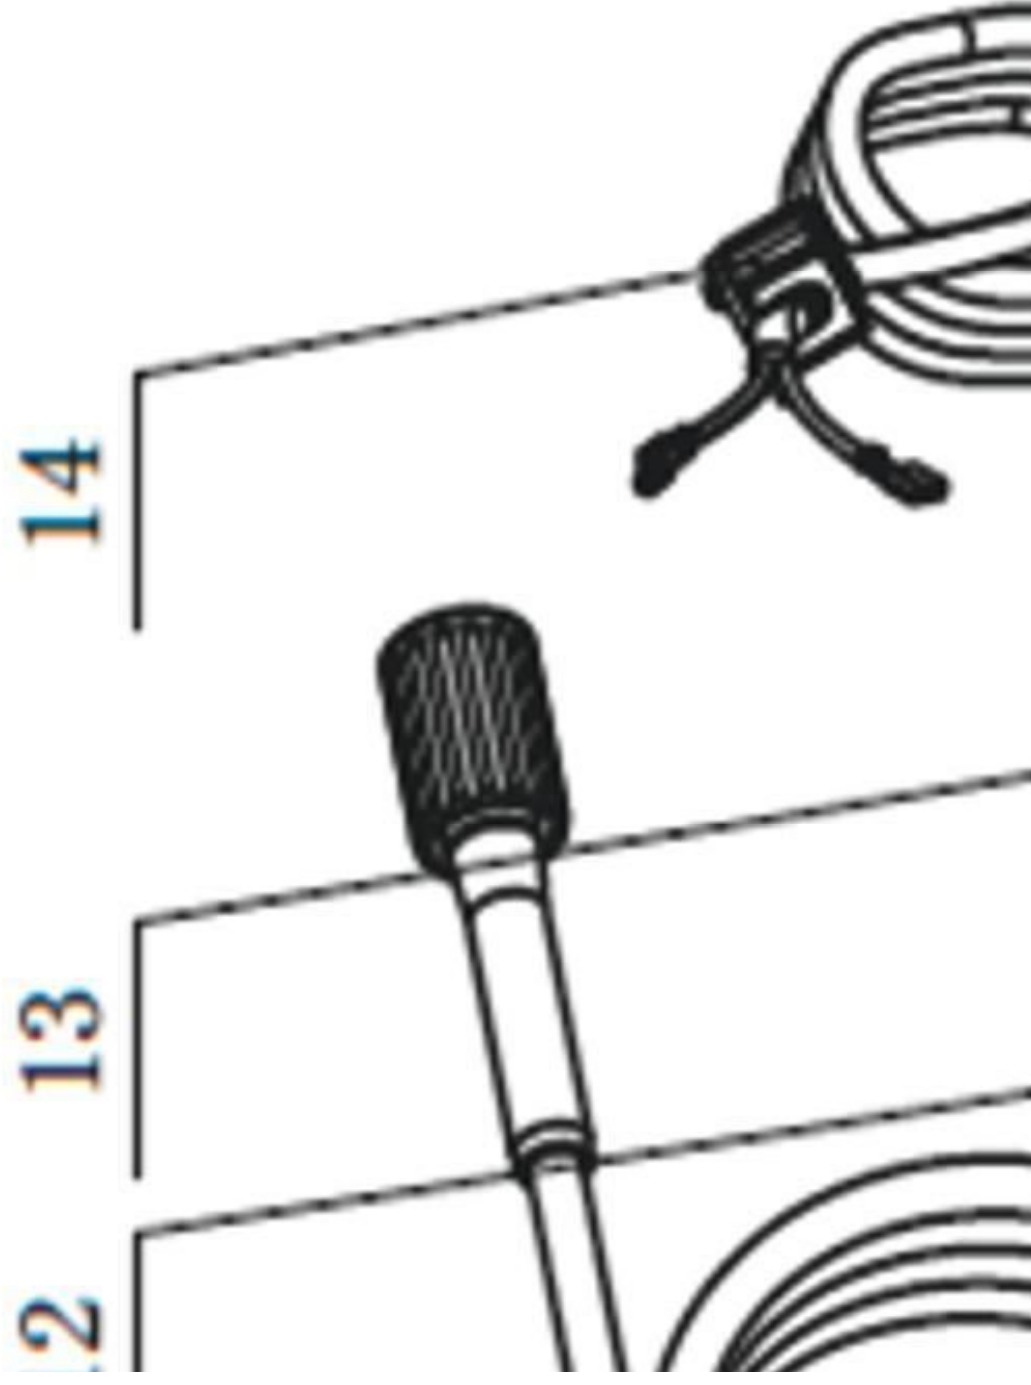


 
8 9 10 11 1



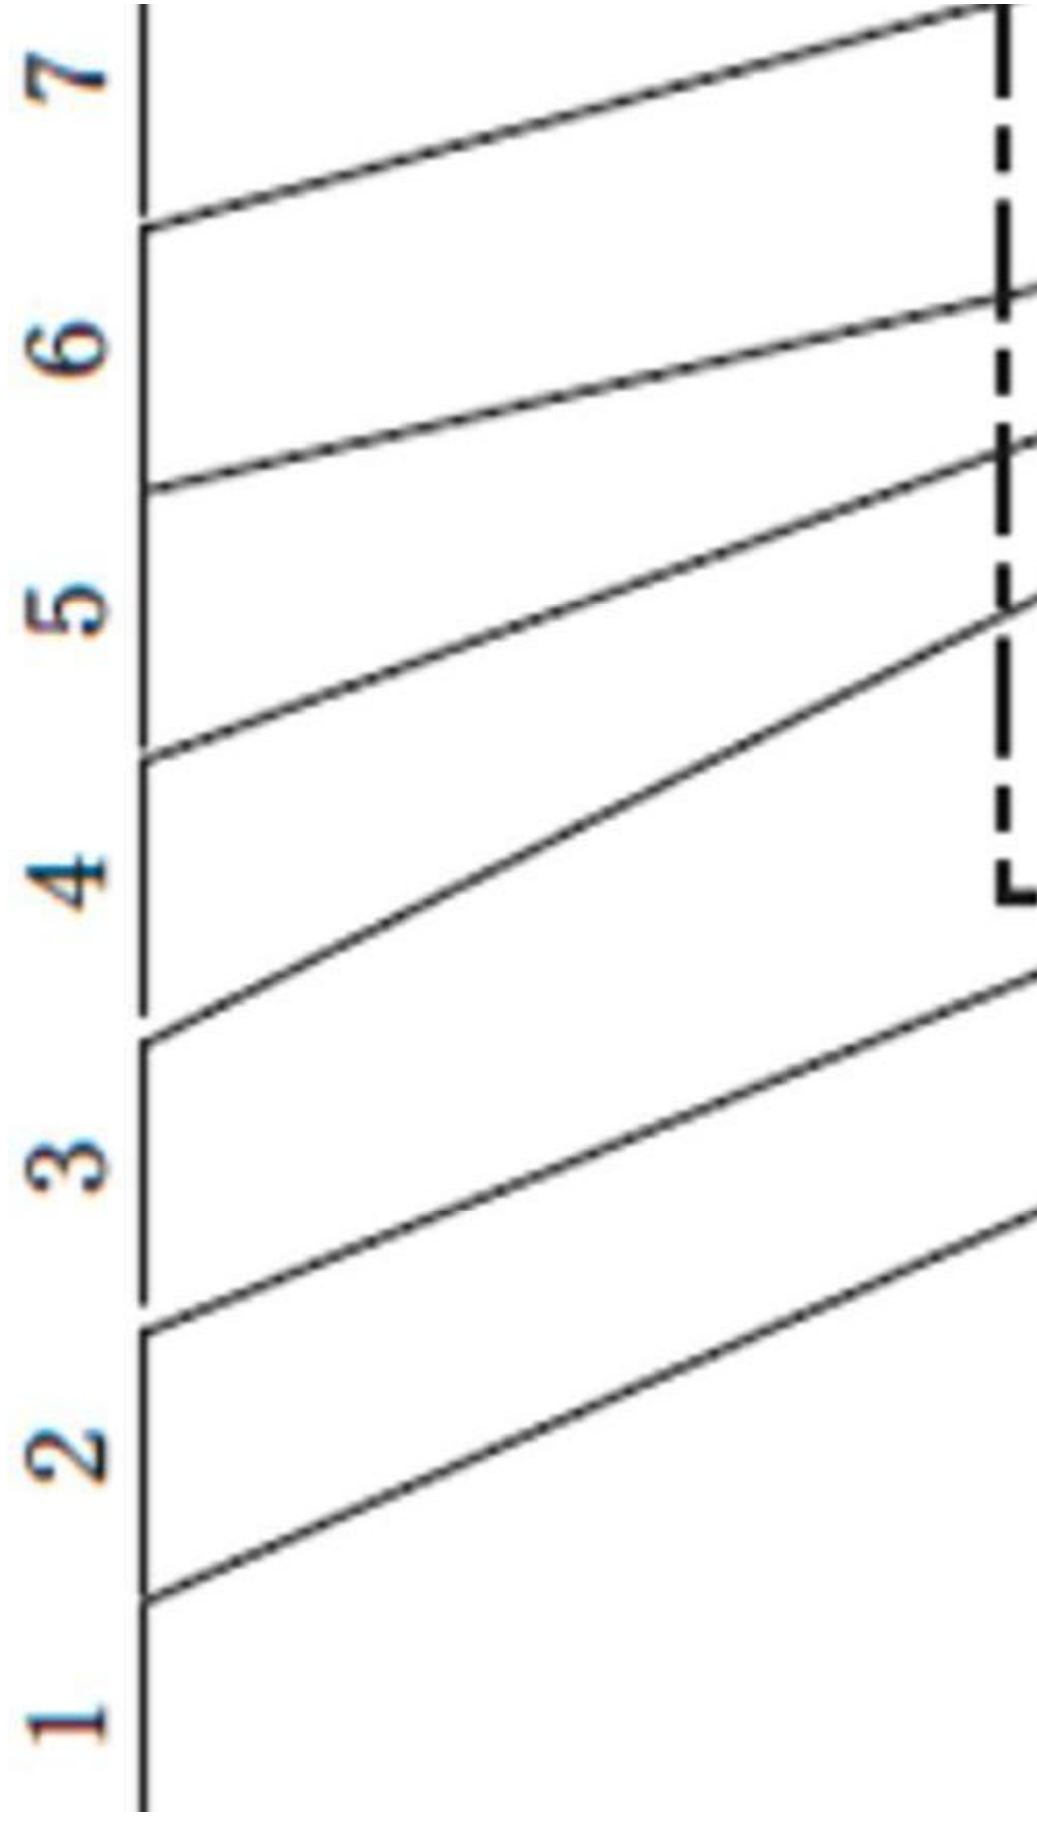




7 6 —
— — — \

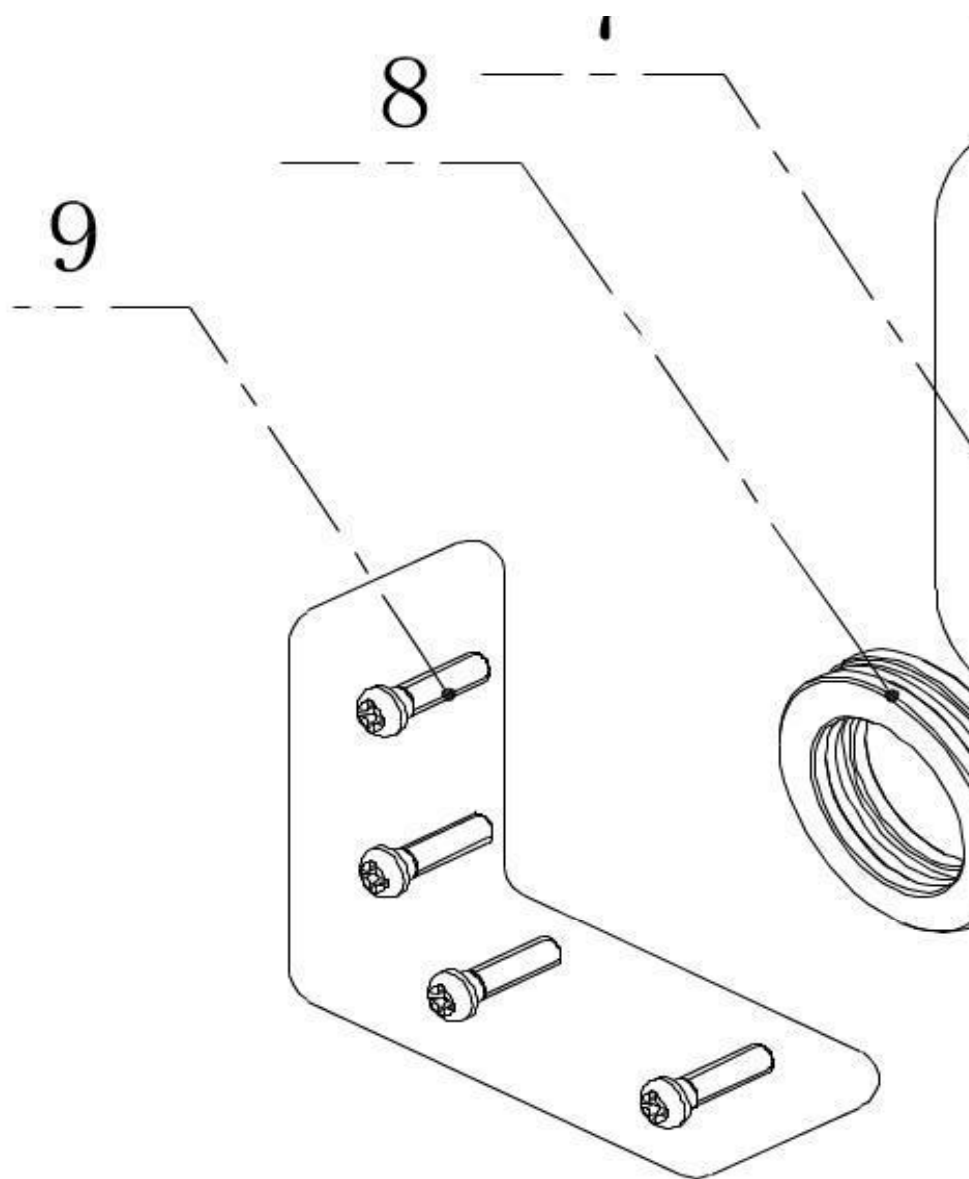 


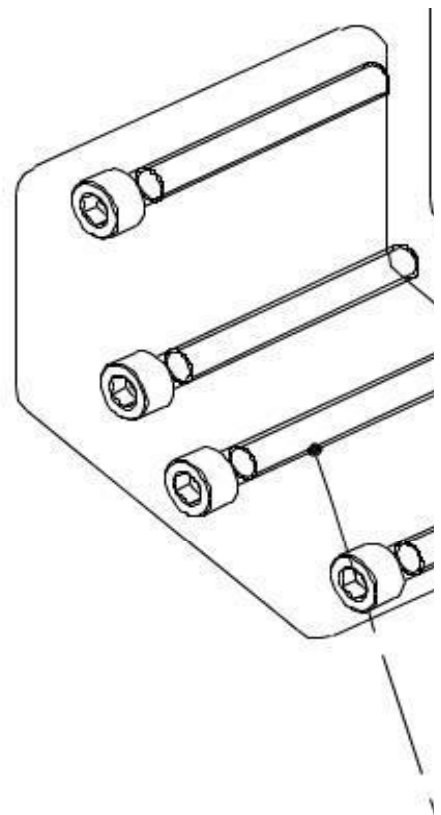 


HPWR12008

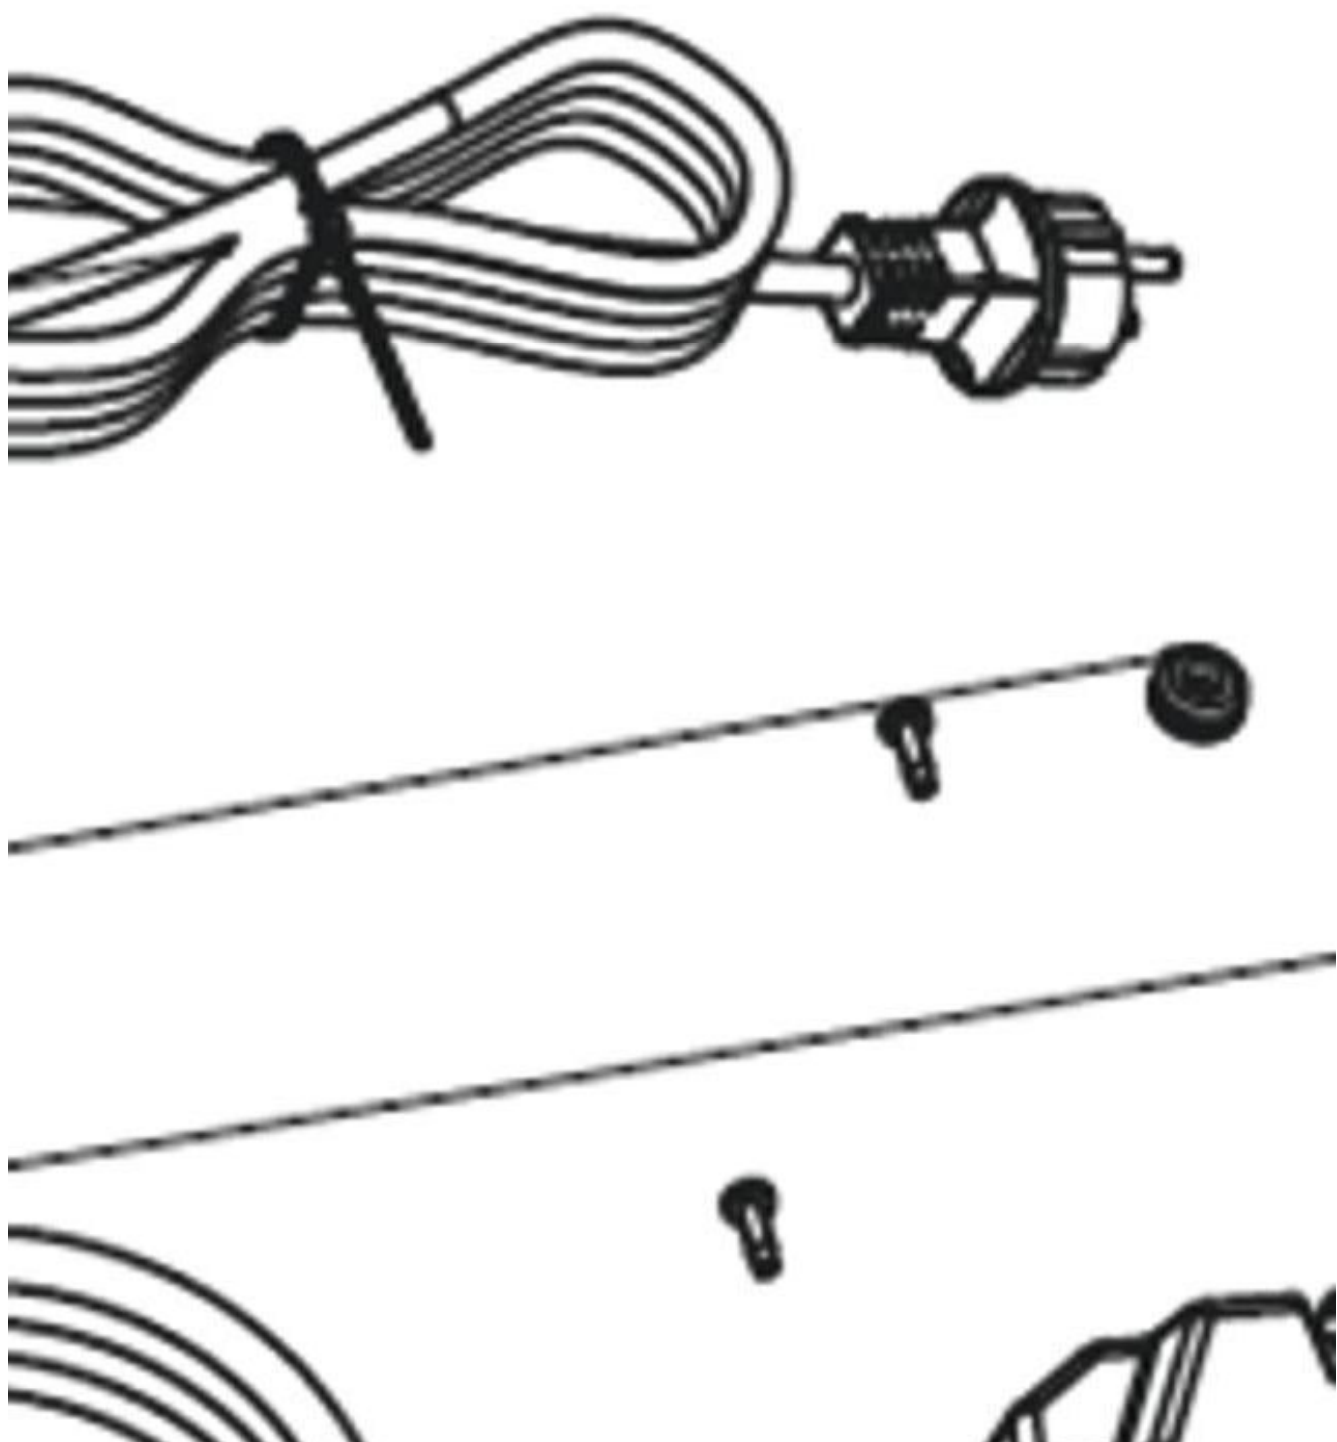 


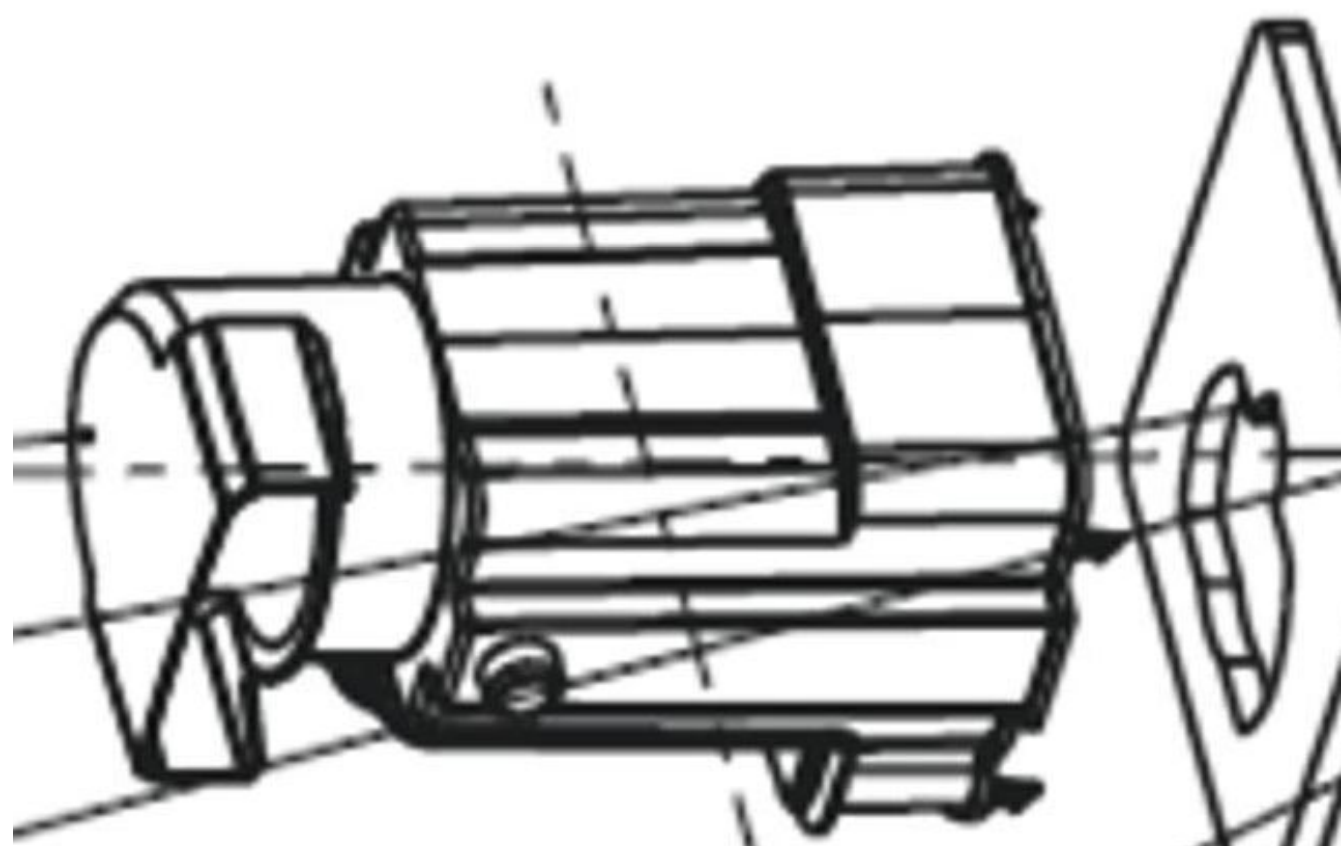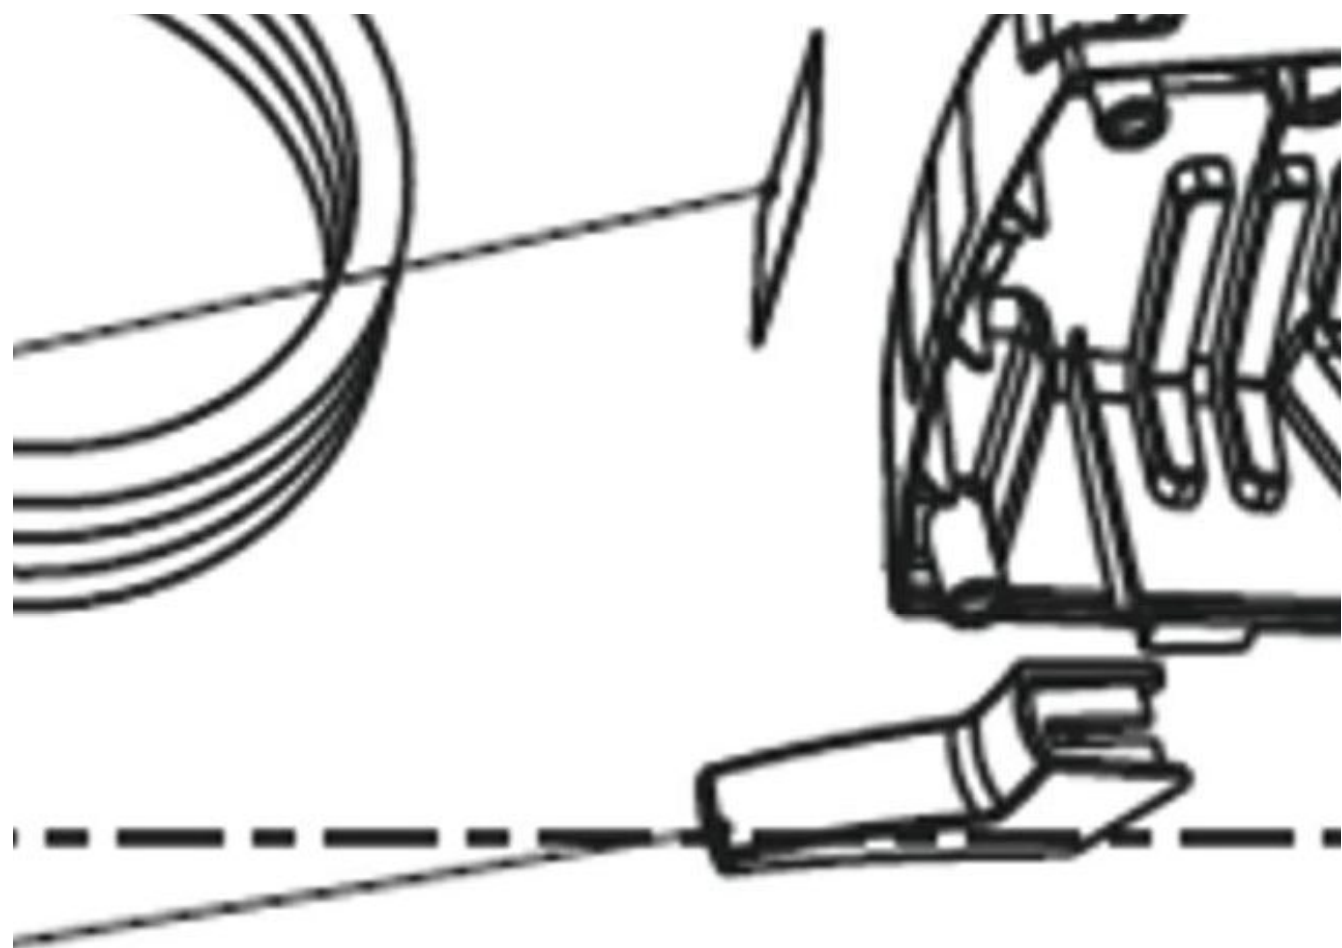  


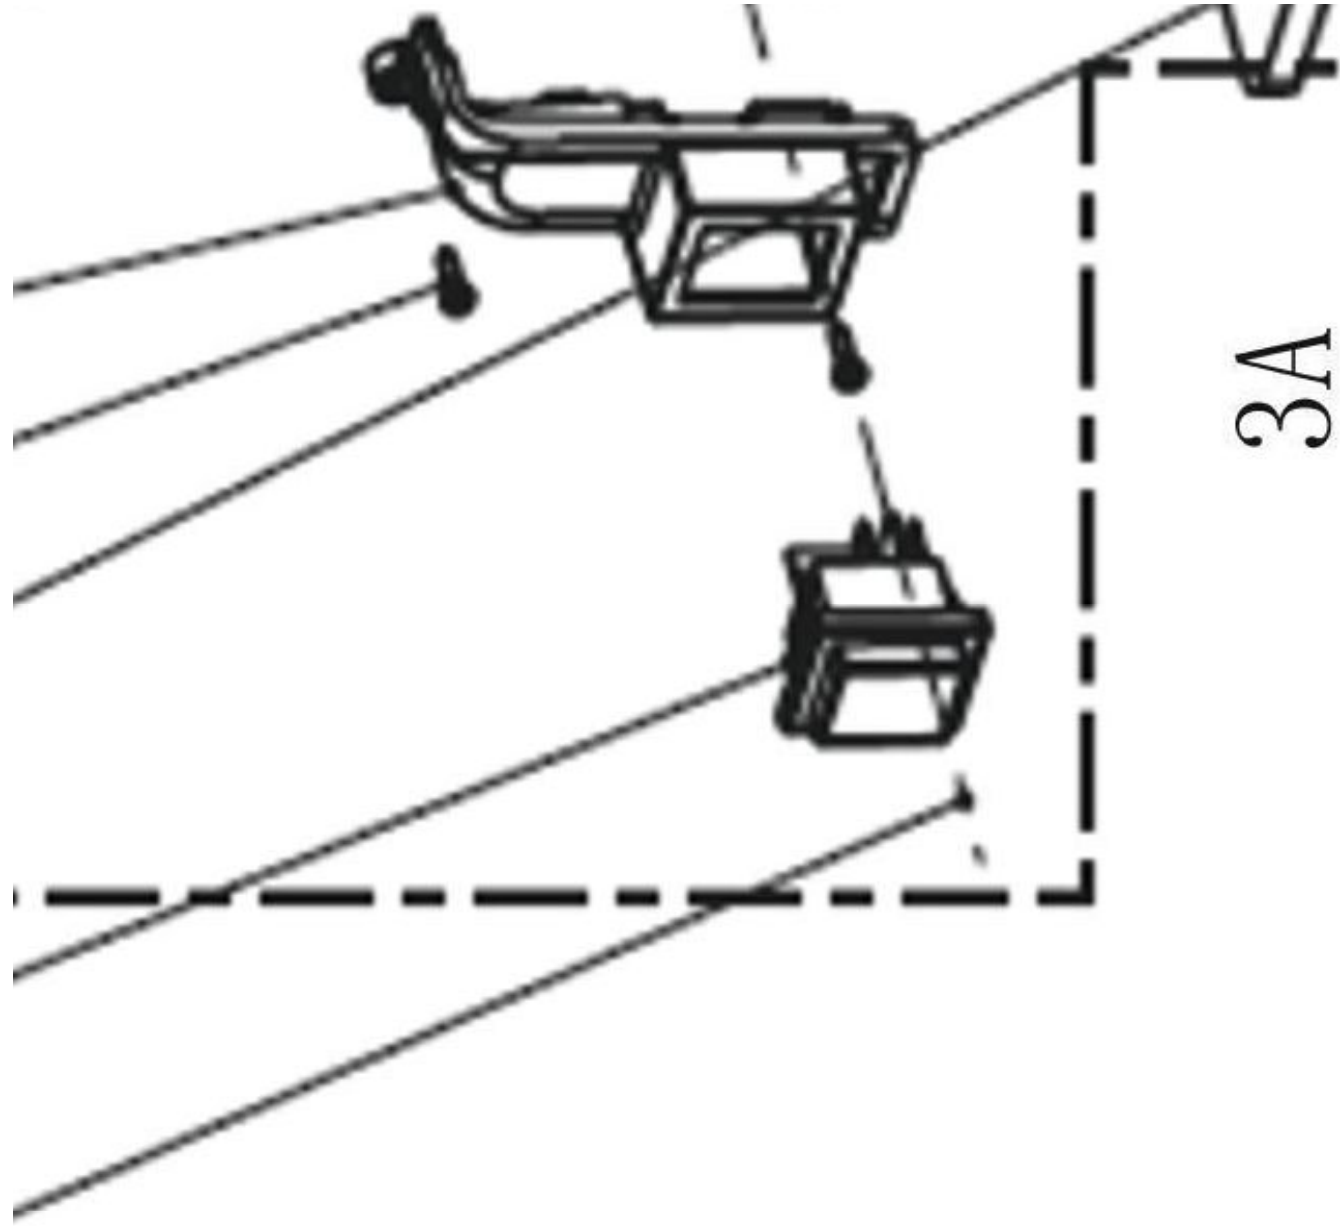 





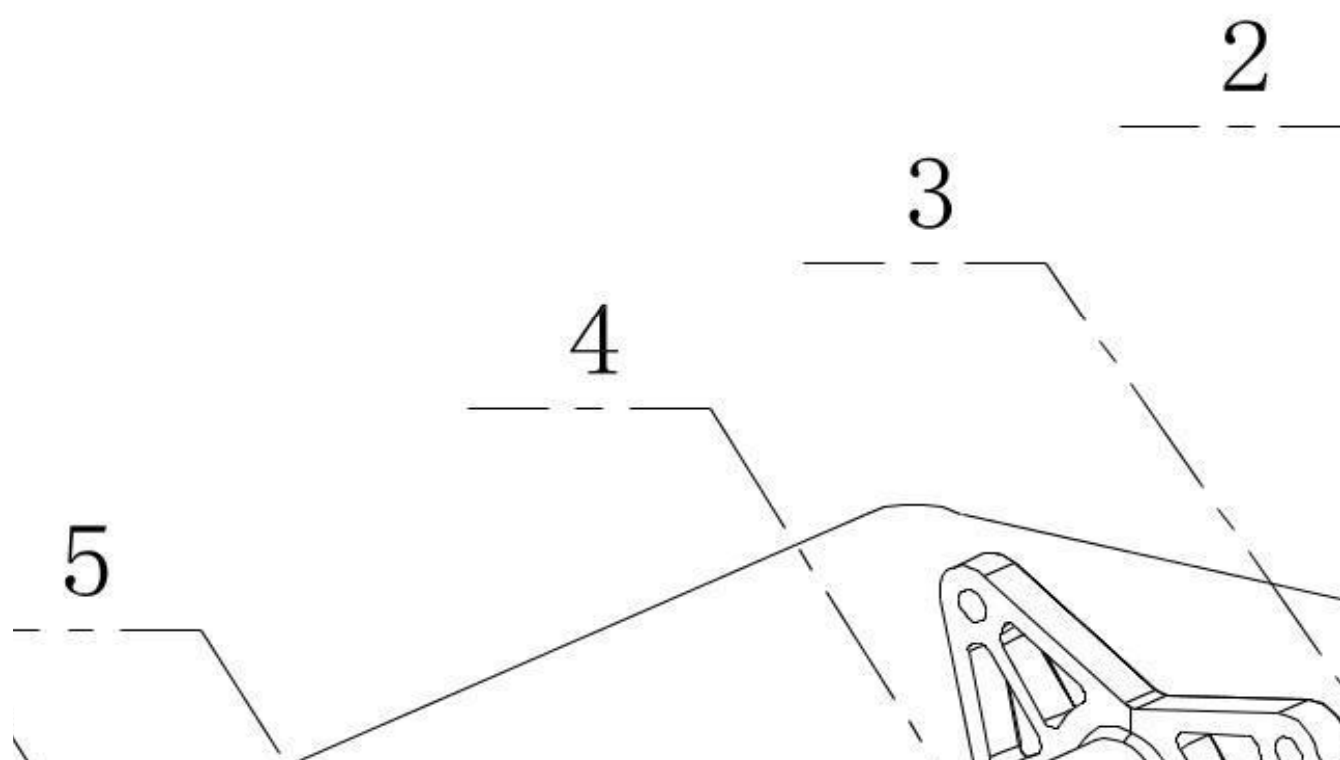      


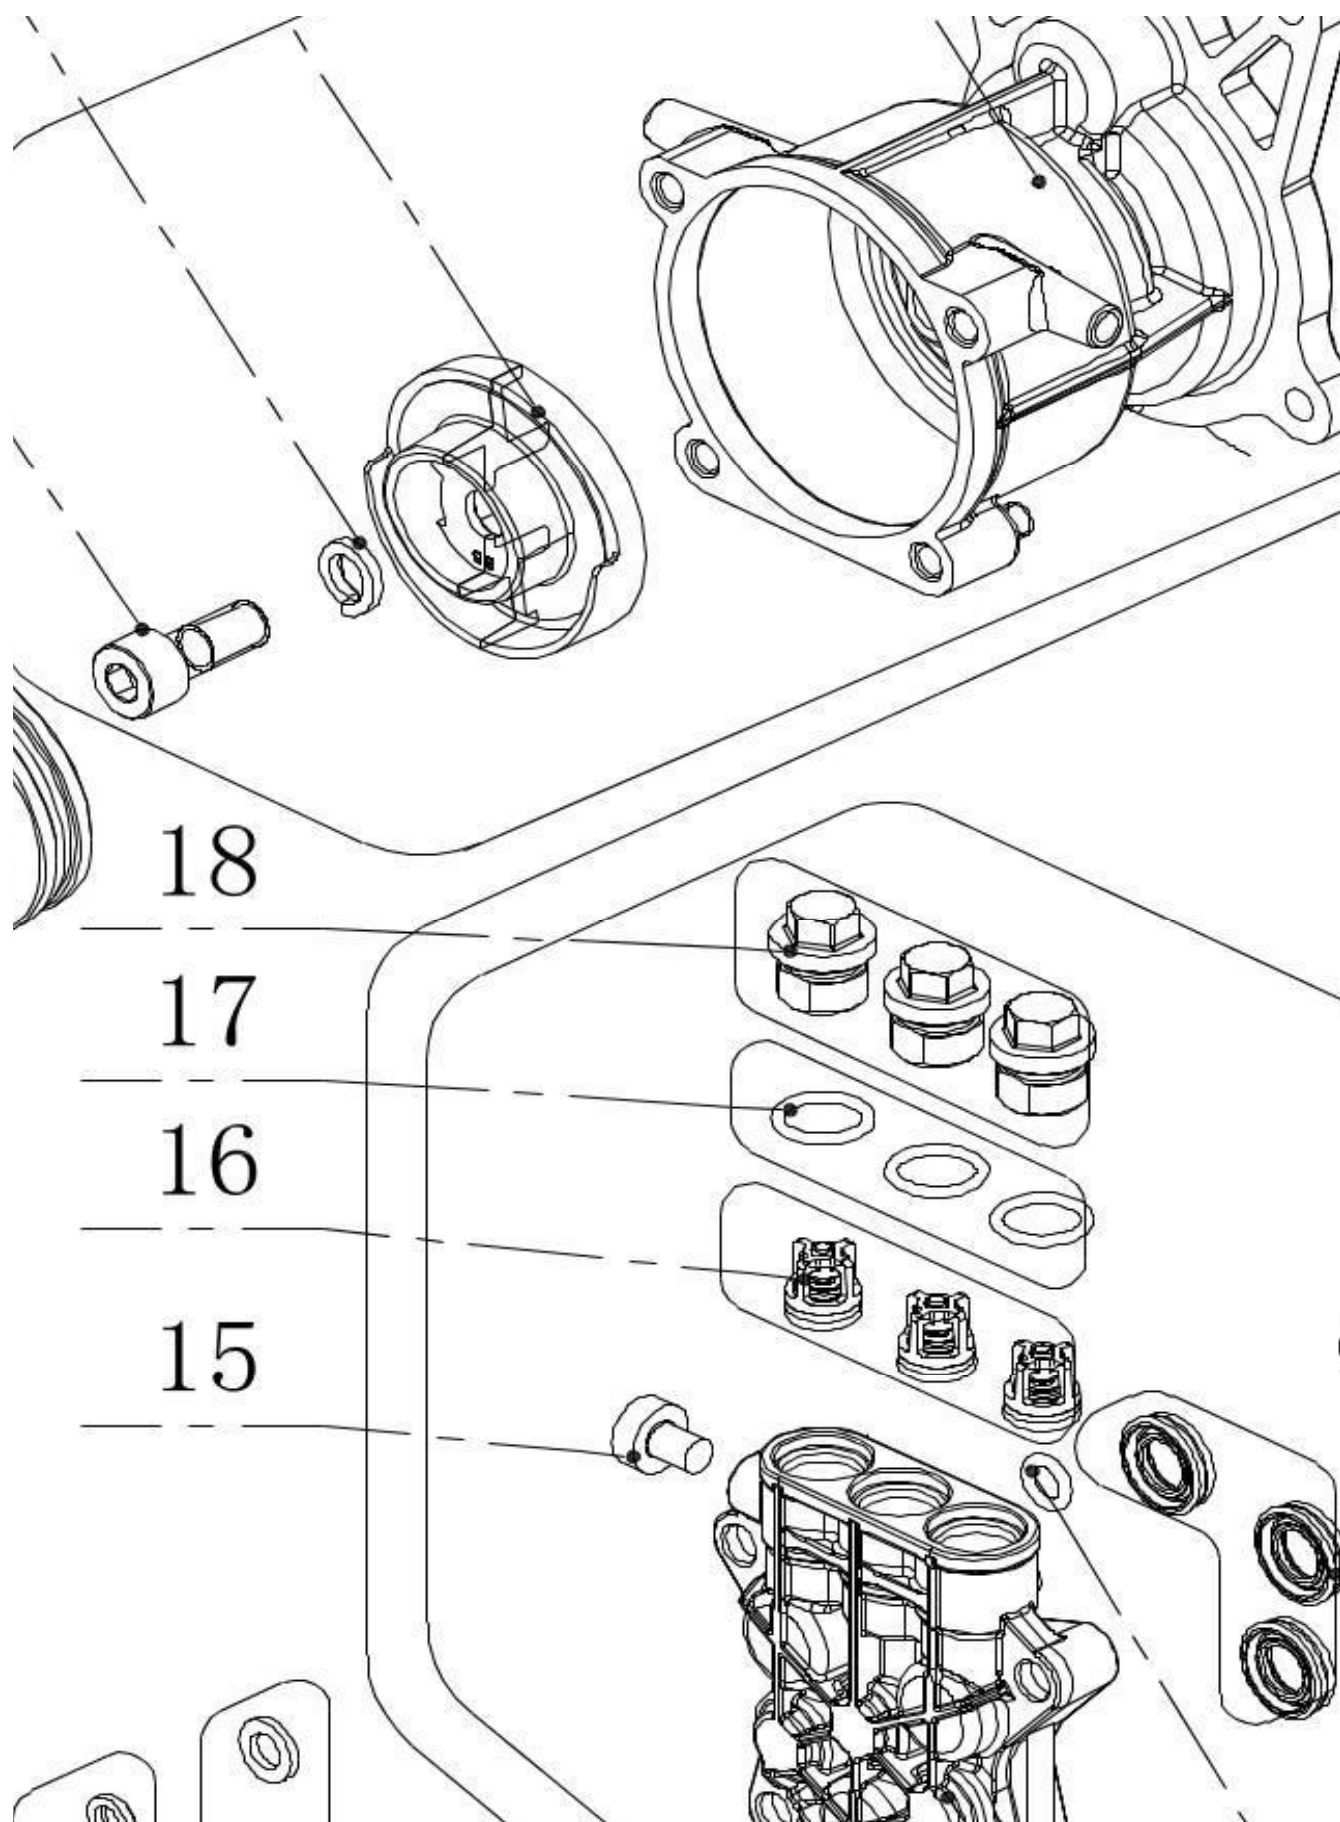 


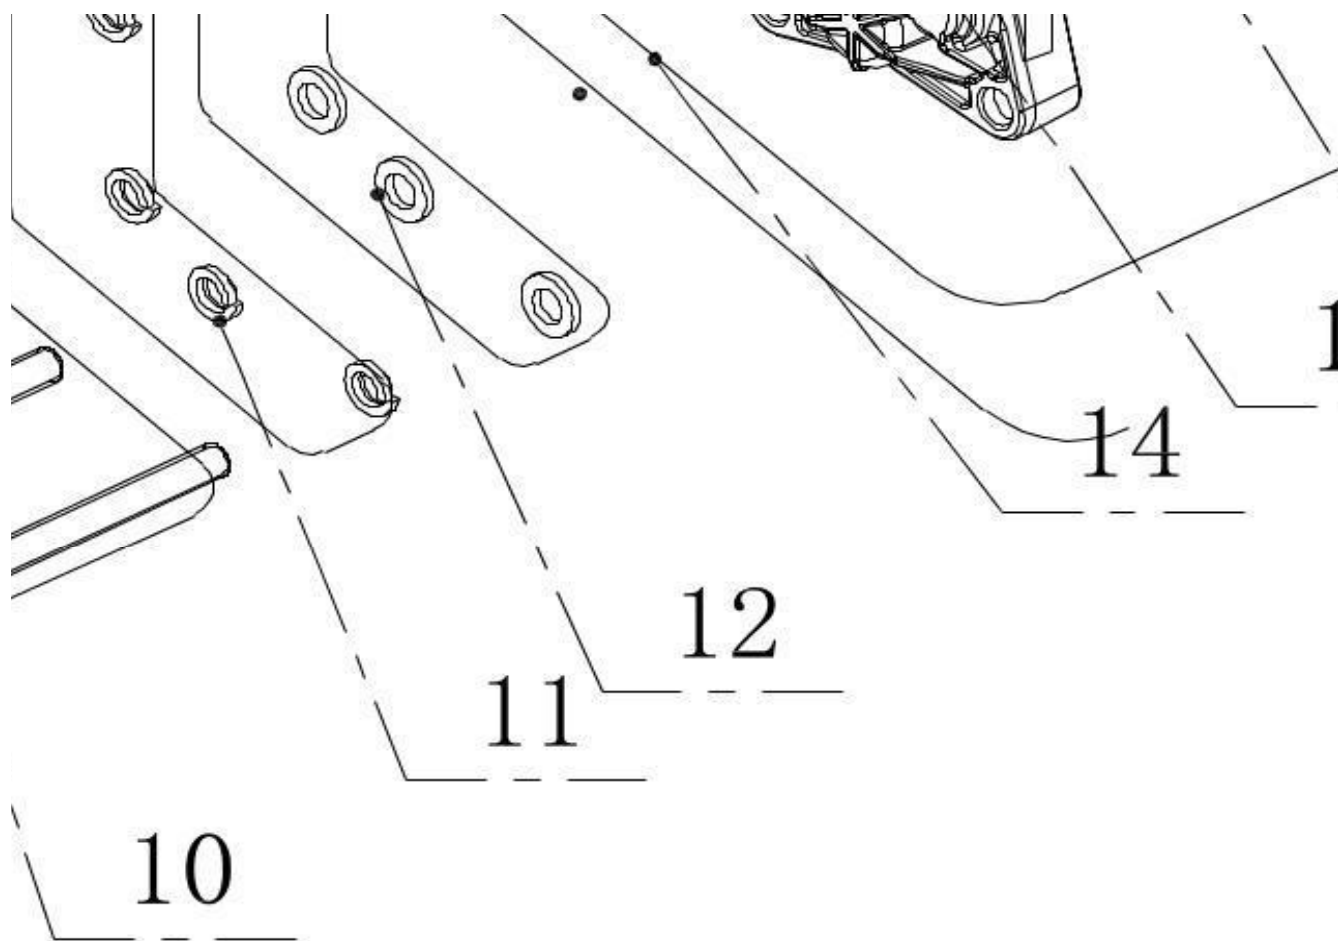 


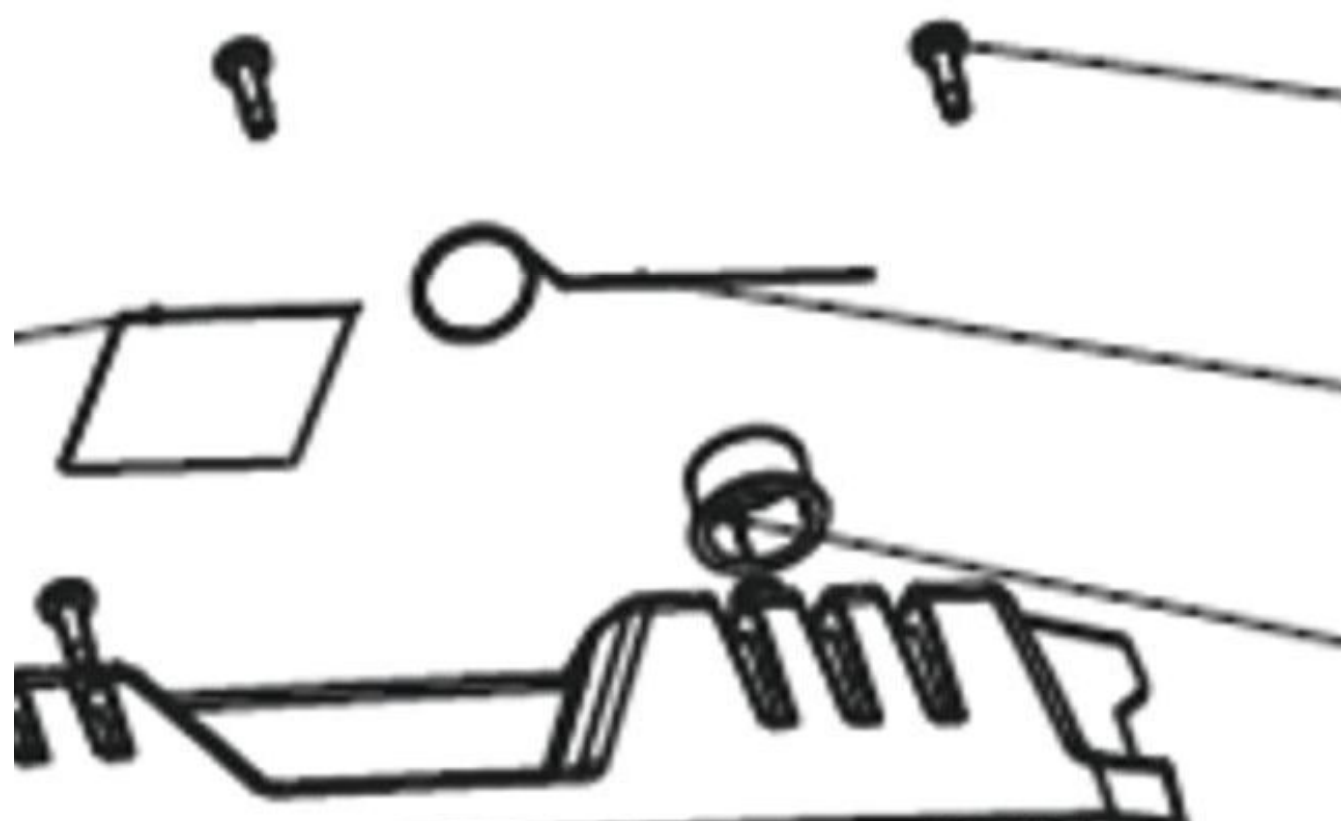 


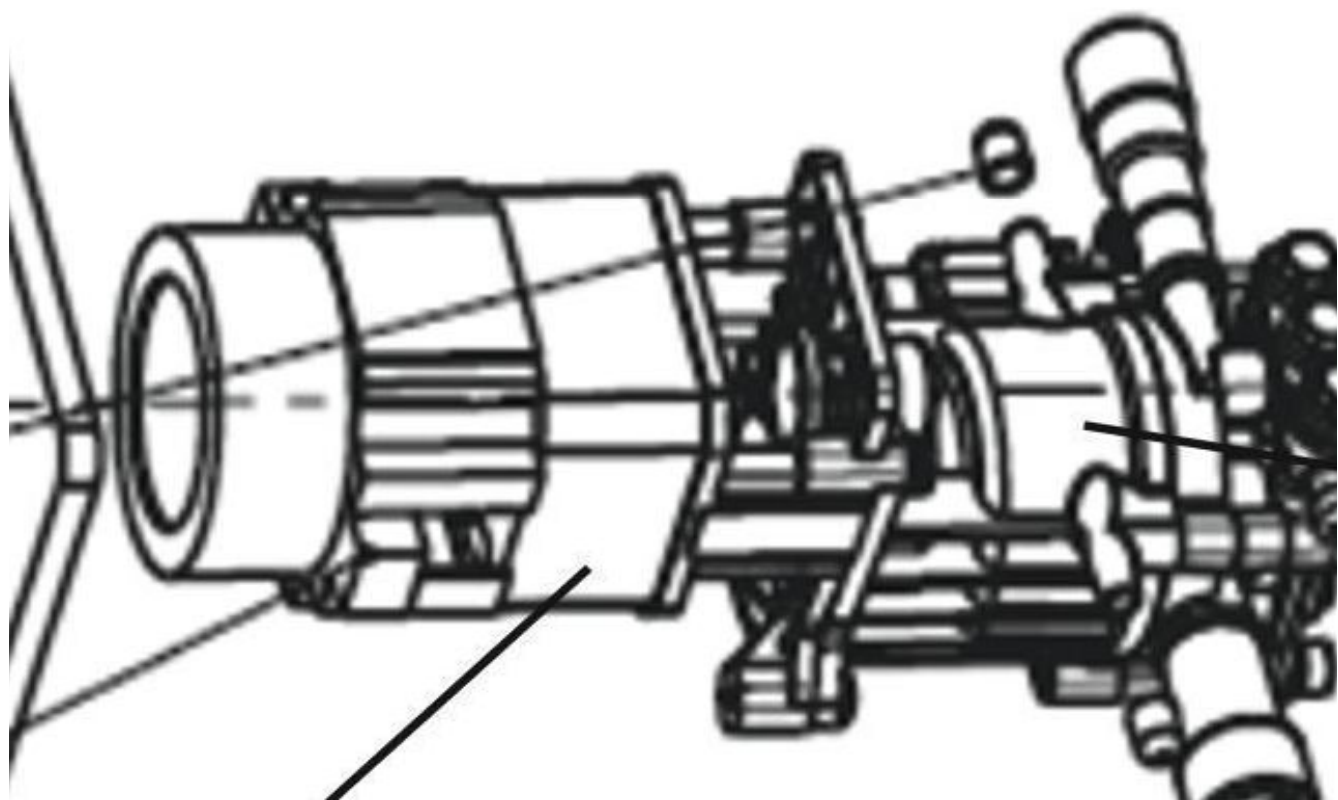 


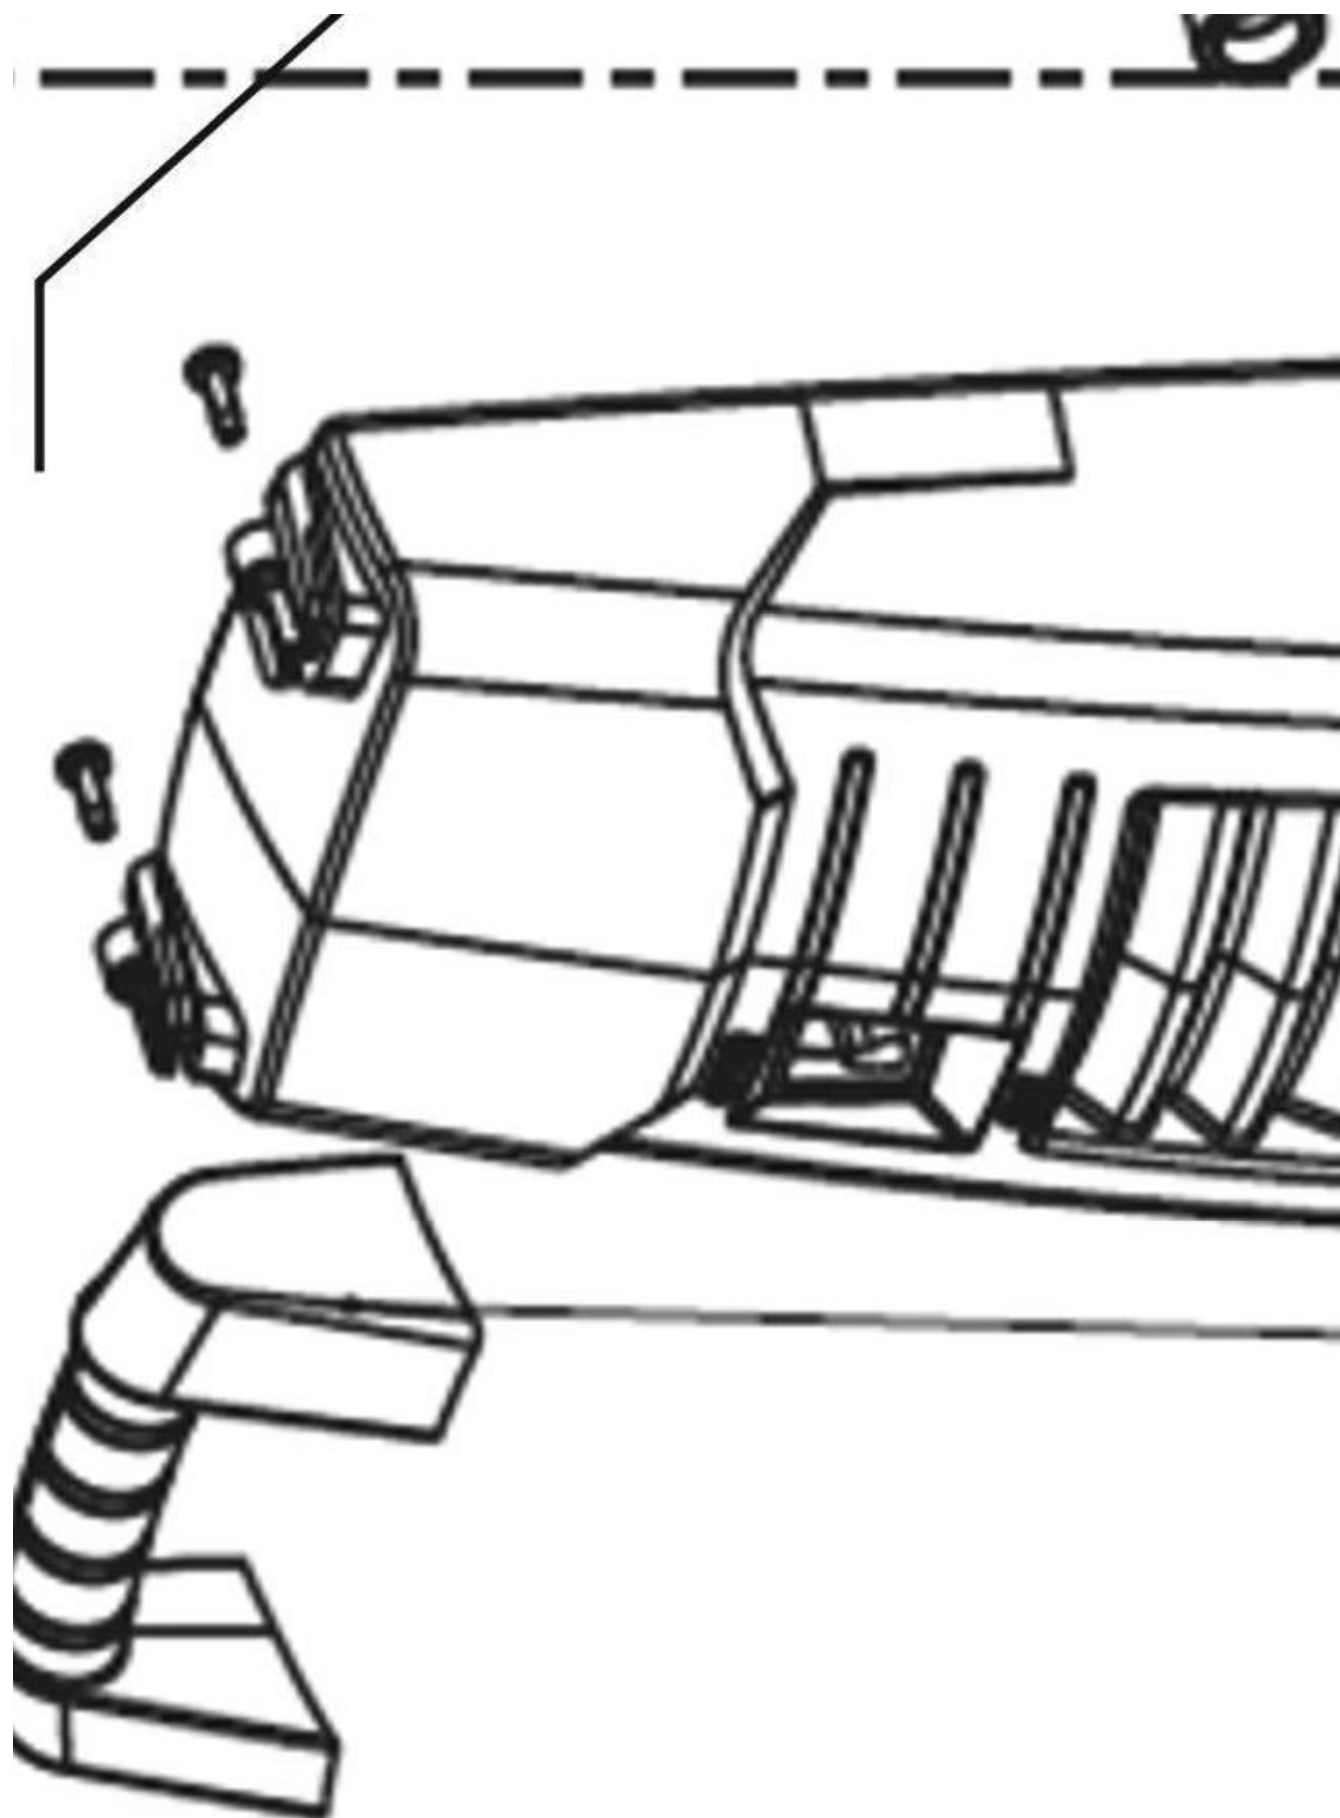

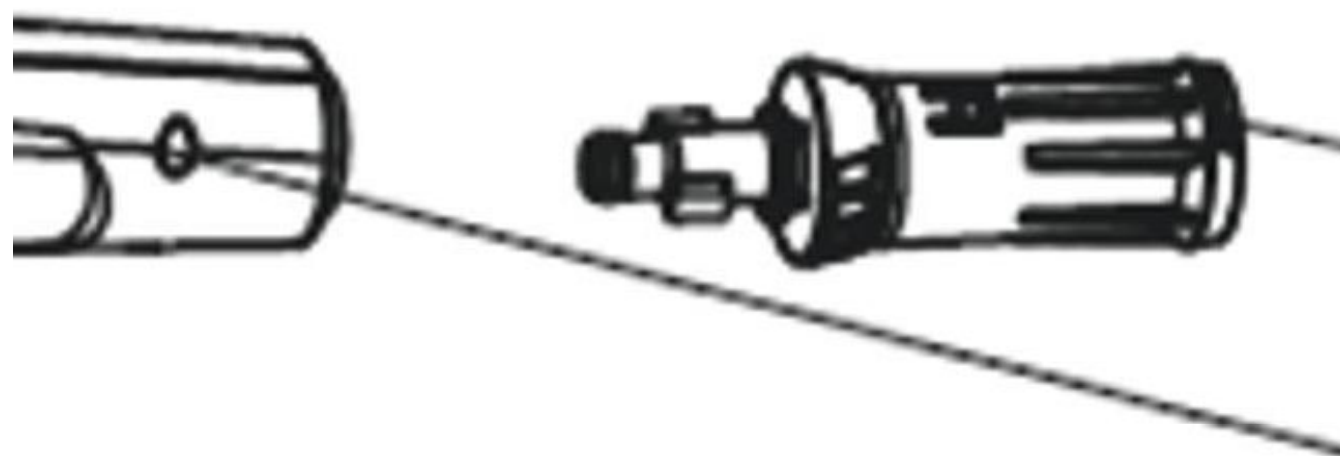

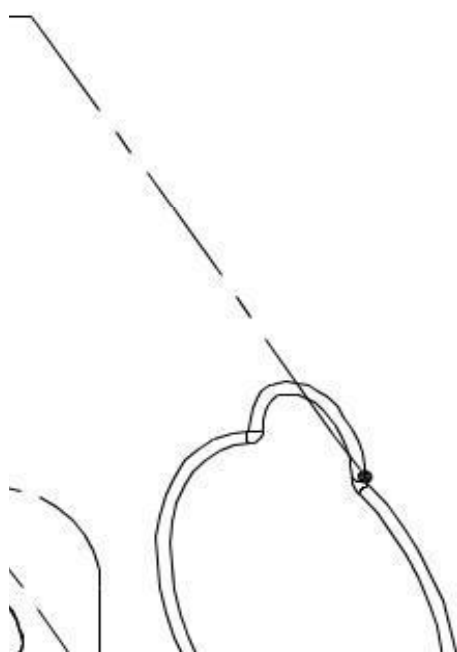

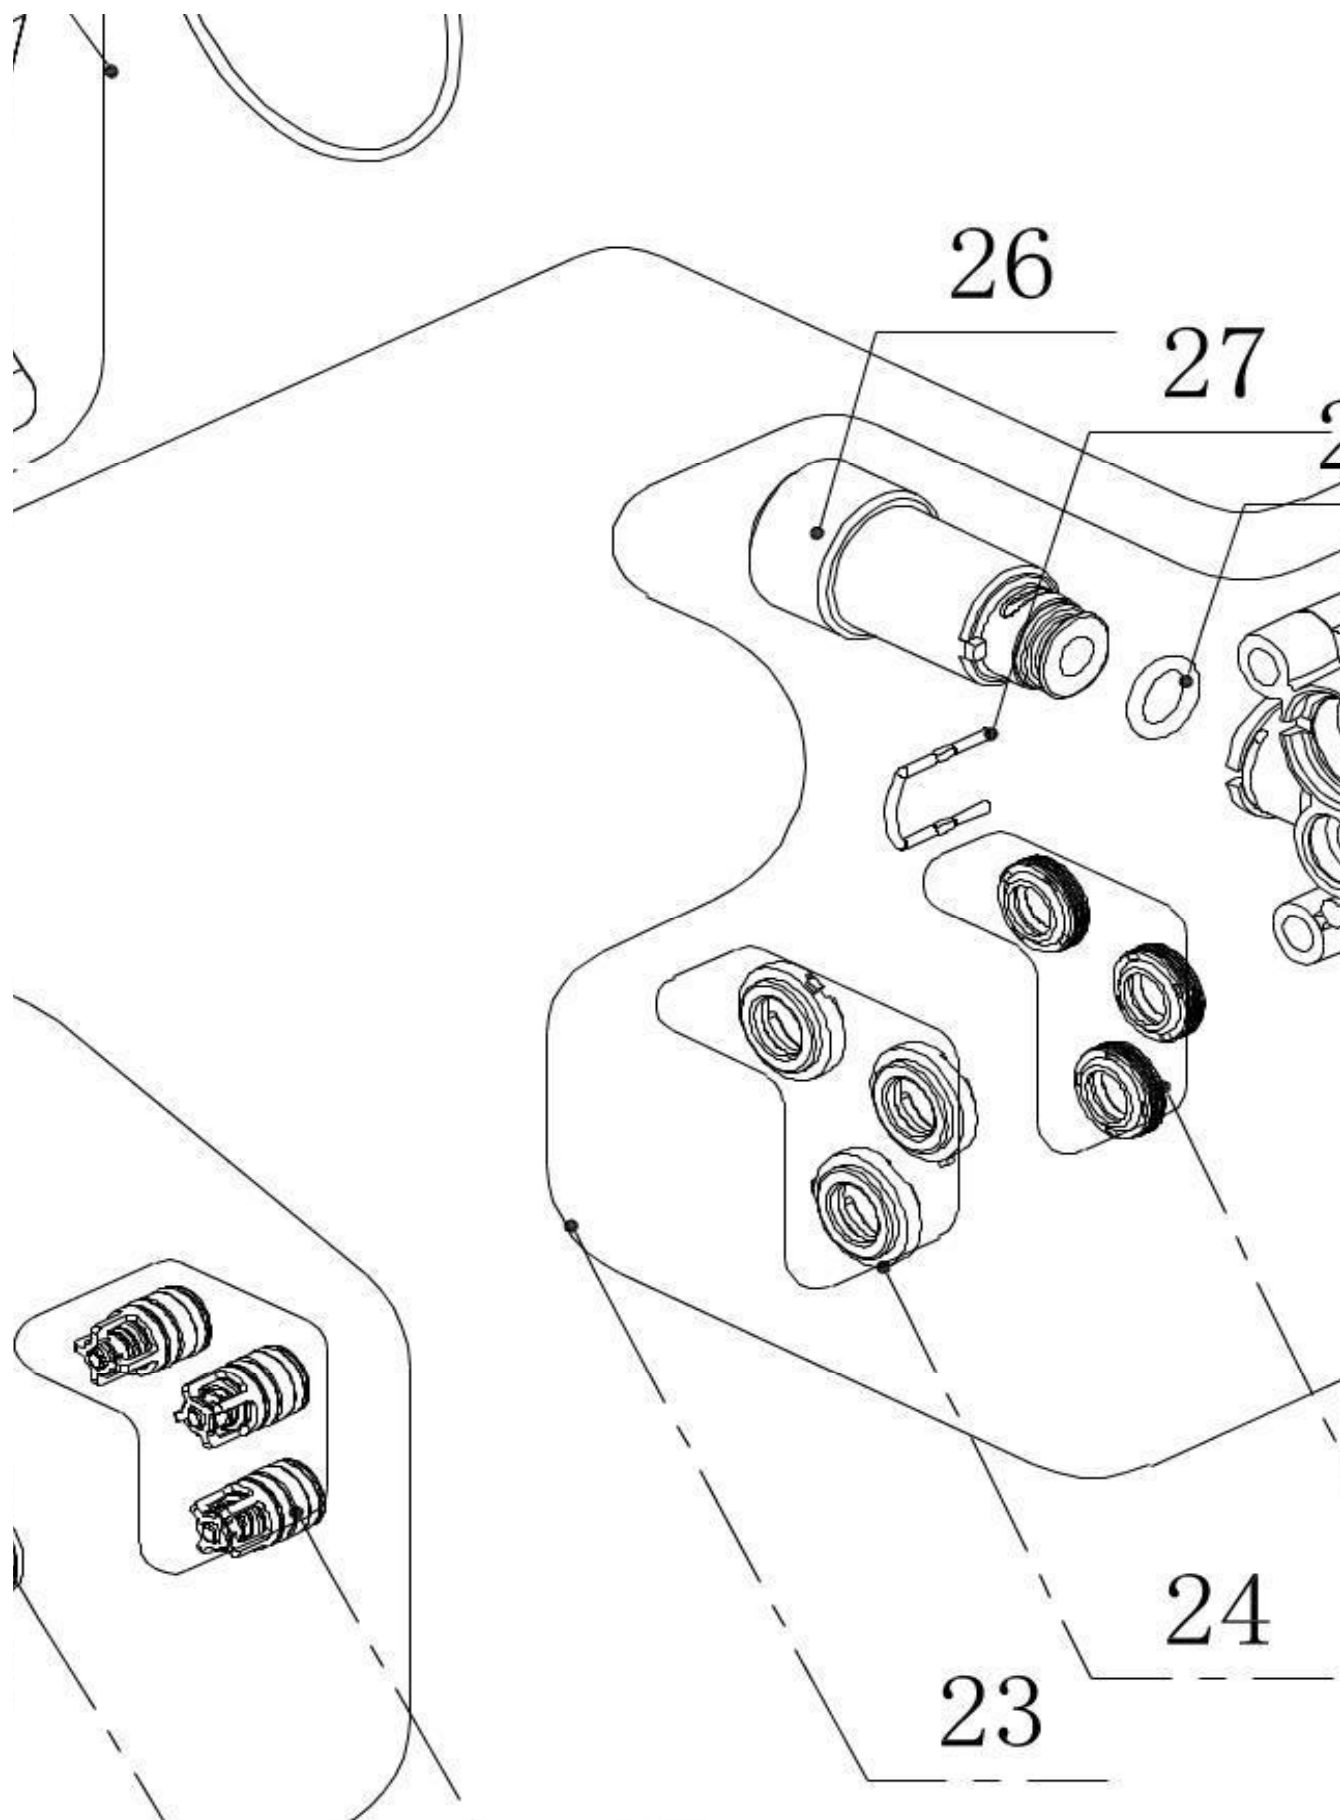

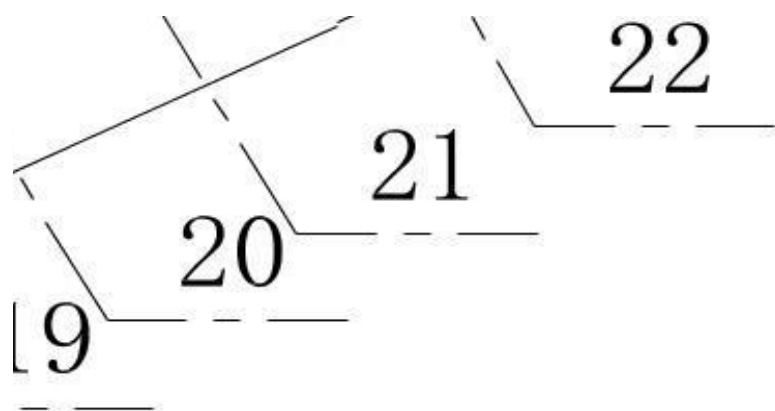


15


16

17

18

  3B

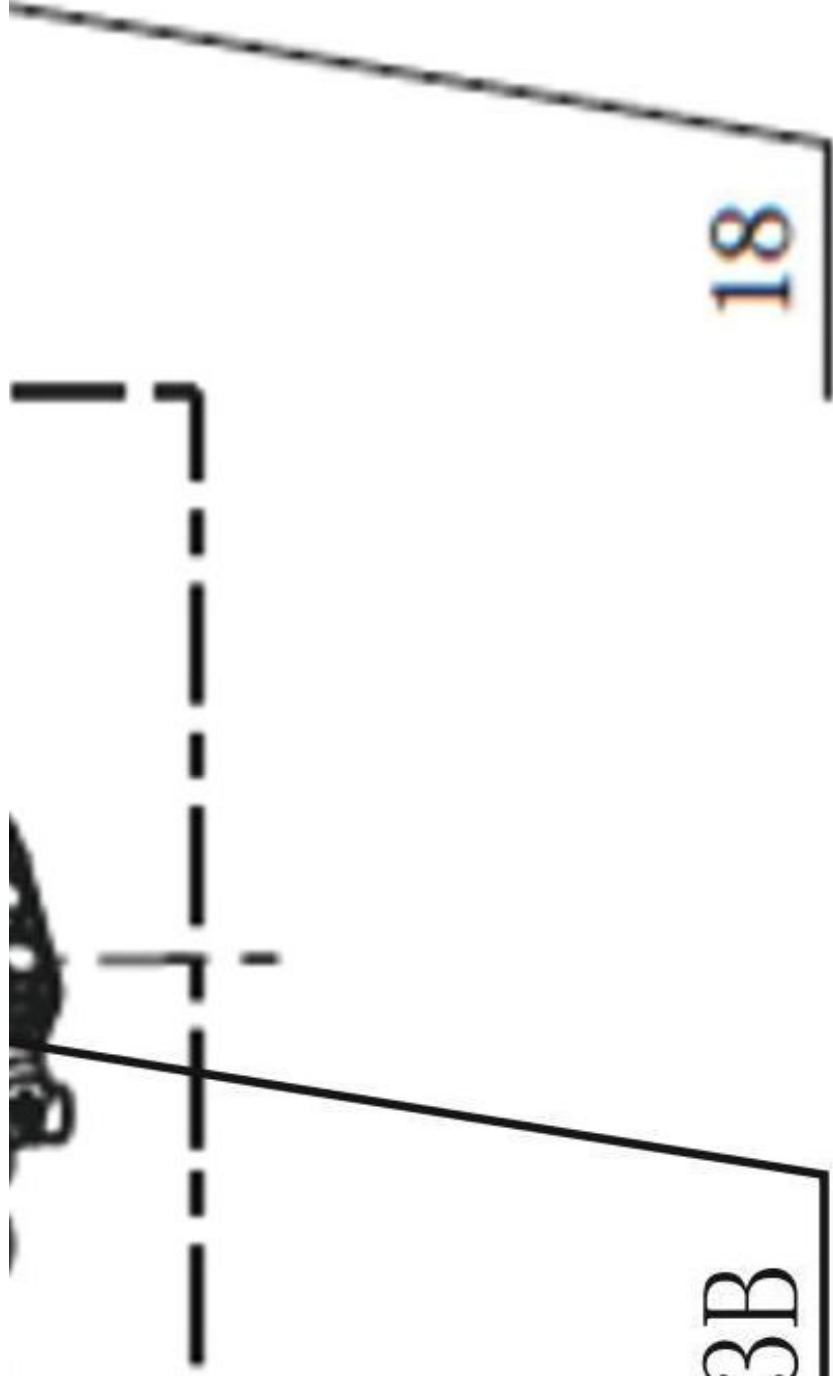

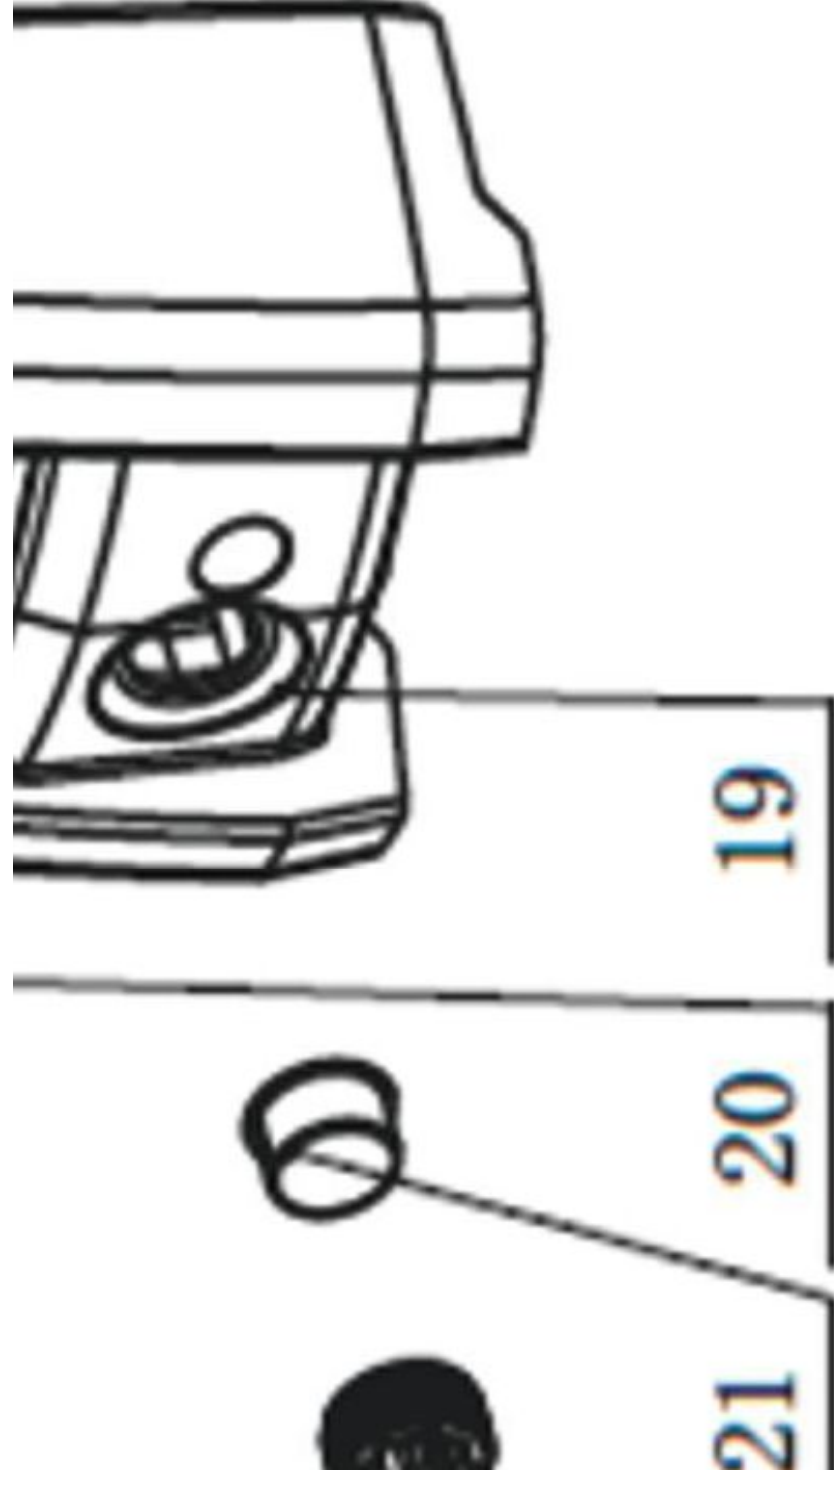



22

24

25

  100

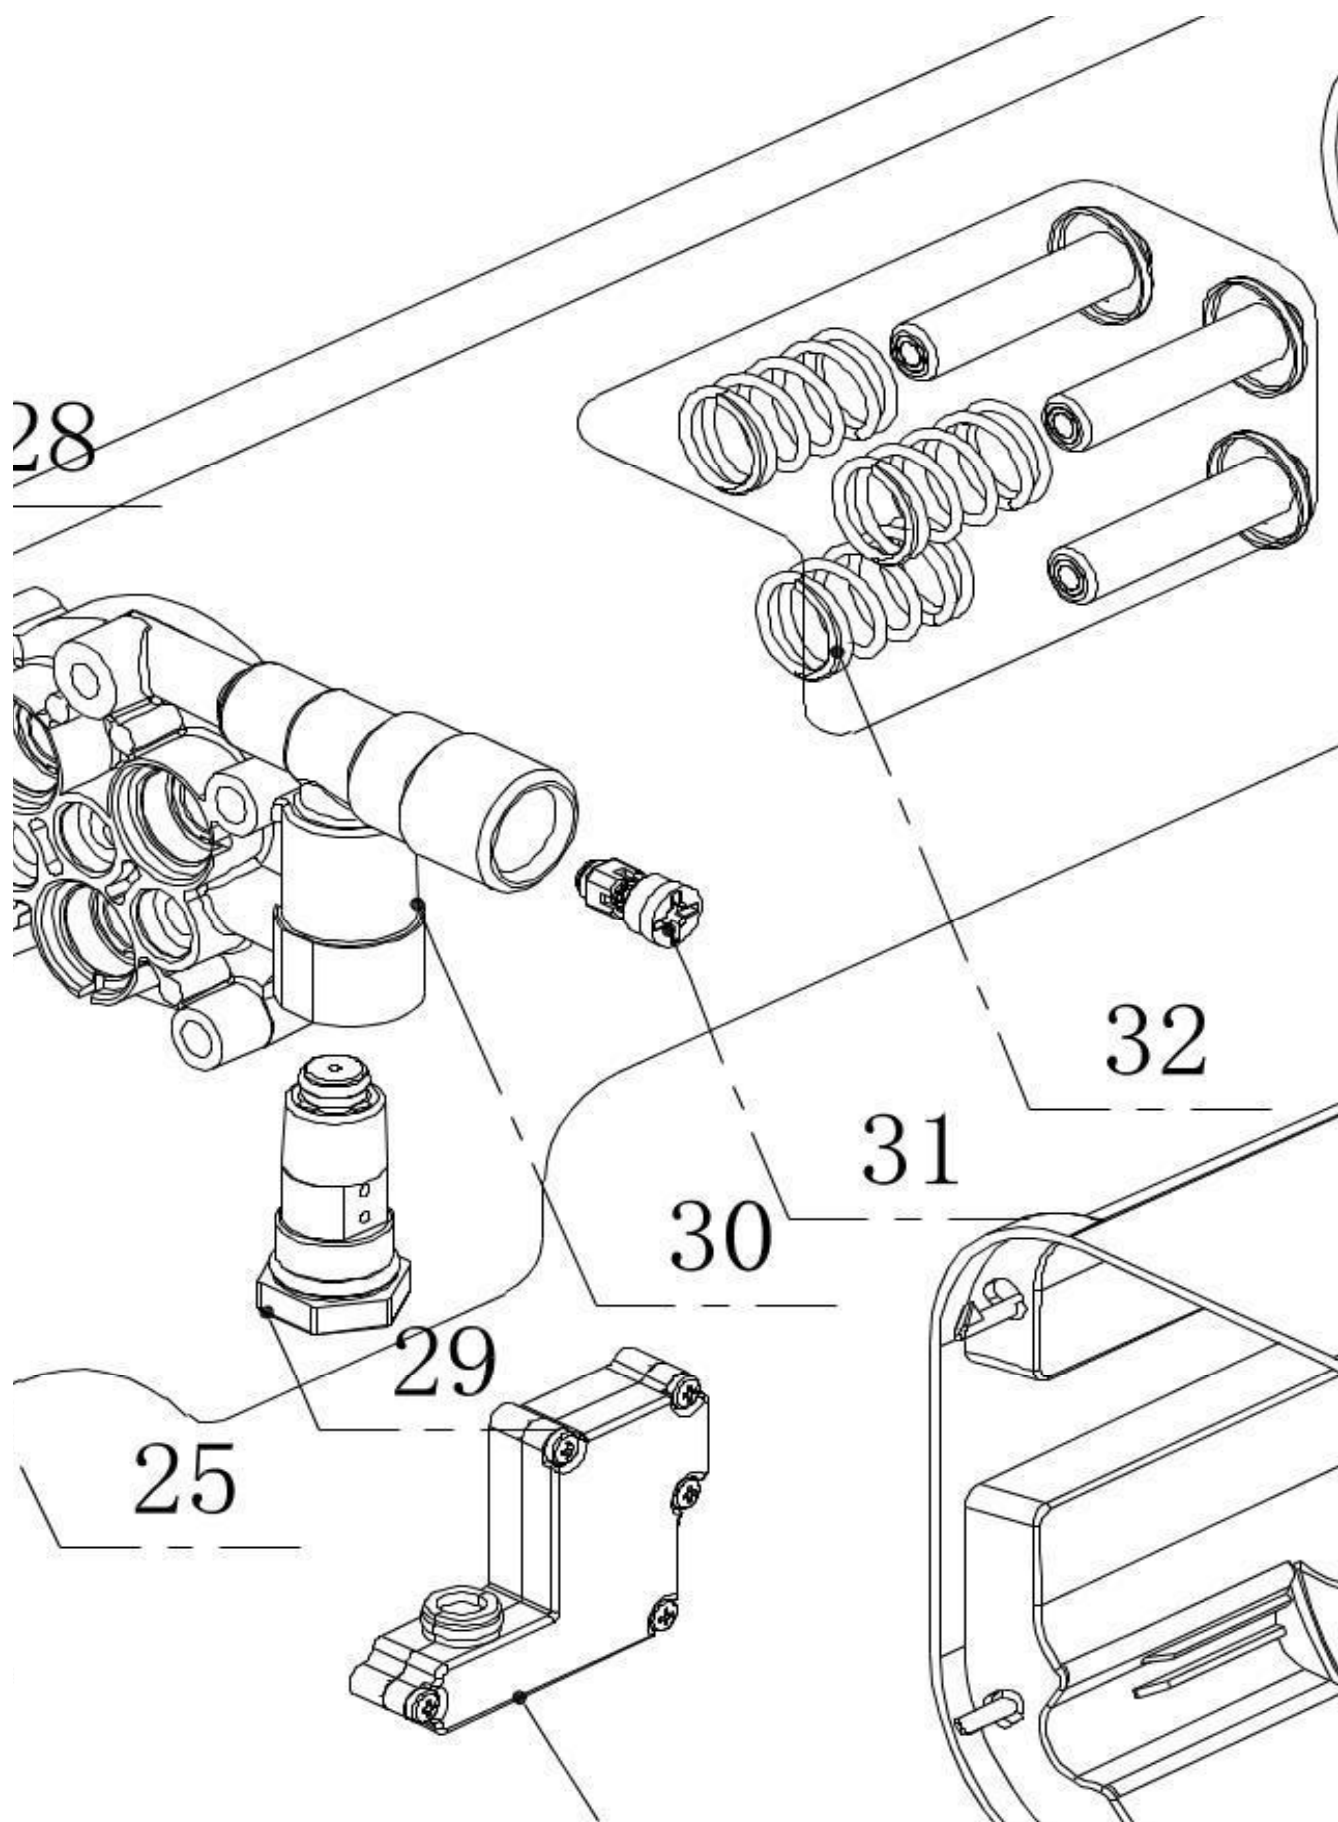

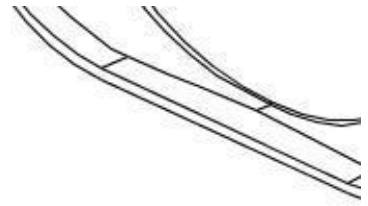

11

