

Spare Part No.	Part No.	Part Name	Easy Damage
CIWLI2085-SP-1	AAA42018301	Head shell protective cover	No
CIWLI2085-SP-1-22	AAAC0000448	Gear Box	No
CIWLI2085-SP-2	AAA52205101	Cephalic shell	No
CIWLI2085-SP-3	AAA50014701	Output shaft bushing	No
CIWLI2085-SP-4	AAA52014501	Output shaft friction gasket	No
CIWLI2085-SP-5-7	AAA50014801	Output shaft assembly	No
CIWLI2085-SP-8-13	AAA50014901	Impact block assembly	No
CIWLI2085-SP-14	AAA50015001	Planetary gear	No
CIWLI2085-SP-15	AAA50015101	Planetary pin	No
CIWLI2085-SP-16	AAA52014601	Planetary tooth pin platen	No
CIWLI2085-SP-17	AAA42018401	Gearbox seal ring	No

CIWLI2085-SP-18	AAA52014701	Planetary gear ring retaining r	No
CIWLI2085-SP-19	AAA50015201	Planetary ring	No
CIWLI2085-SP-20	AAA53003001	Bearing	No
CIWLI2085-SP-21	AAA52205201	Gear case	No
CIWLI2085-SP-22	AAA42403901	Gear box cooling hole pad	No
CIWLI2085-SP-23	AAA60008301	Rotor	Yes
CIWLI2085-SP-24	AAA60008302	Stator	Yes
CIWLI2085-SP-24/30/36/38	AAAC0000137	Stator and electric control ass	No
CIWLI2085-SP-25	AAA52714002	Screws	No
CIWLI2085-SP-26/39	AAA40084903	Left and right case	No
CIWLI2085-SP-27	AAA52000401	pothook	No
CIWLI2085-SP-28	AAAC0000012	Screws	No

CIWLI2085-SP-29	AAA40000503	F/R Change Lever	No
CIWLI2085-SP-30	AAA60500512	Switch assembly	Yes
CIWLI2085-SP-31	AAA42018501	Switch cushioning pad	No
CIWLI2085-SP-32	AAA40083201	Lampshade	No
CIWLI2085-SP-33	AAA40082101	Speed regulating cover plate	No
CIWLI2085-SP-34	AAA42001702	Rubber Column	No
CIWLI2085-SP-35	AAA42018601	Capacitive shock pad	No
CIWLI2085-SP-36	AAA60909801	PCB	No
CIWLI2085-SP-37	AAA42018701	Controller shock pad	No
CIWLI2085-SP-38	AAA61100101	Electrode Holder	No
CIWLI2085-SP-40	AAA40085003	Rear cover	No

CIWLI2085-SP-41	AAA52718001	Screws	No
CIWLI2085-SP-42	AAA42018801	ring	No
CIWLI2085-SP-43	AAAC0000013	shock-absorbing pad	No

Part Picture
















1
0
■

