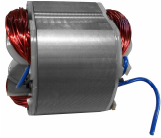 
 
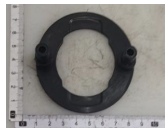 


PL10508

Spare Part No.	Part No.	Part Name	Easy Damage	Part Picture
PL10508-SP-1	AA017S00001	Stator	No	
PL10508-SP-2	AA017000002	baffle	No	
PL10508-SP-3	AA017000003	ST screw 4.2*70	No	
PL10508-SP-4	AA017000004	dust tube	No	
PL10508-SP-5	AA017R00005	Rotor	No	
PL10508-SP-6	A1016000000	bearing 6000	No	
PL10508-SP-7	AA017000006	ST screw 4.2*16	No	

PL10508-SP-8	AA017000007	wind deflector	No	
PL10508-SP-9	AA017000008	cover board	No	
PL10508-SP-10	AA017000009	ST screw 4.2*16	No	
PL10508-SP-11	AA017000010	small wheel	No	
PL10508-SP-12	AA017000011	belt cover	No	
PL10508-SP-13	AA017000012	ST screw 4.2*16	No	
PL10508-SP-14	AA017000013	label	No	
PL10508-SP-15	AA017000014	belt	No	
PL10508-SP-16	AA017000015	big wheel	No	
PL10508-SP-17	AA017000016	big wheel Washer	No	
PL10508-SP-18	AA017000017	Head cover	No	

PL10508-SP-19	A1016000000	bearing 6000	No	
PL10508-SP-20	AA017000018	Cutter holder	No	
PL10508-SP-21	AA017000019	dust ring	No	
PL10508-SP-22	A1010608000	Bearing 608	No	
PL10508-SP-23	AA017000020	Bearing sleeve	No	
PL10508-SP-24	AA017000021	ST screw 4.2*20	No	
PL10508-SP-25	AA017000022	blade	No	
PL10508-SP-26/28	AA017000023	Hang knife plate/Blade Clam No	No	

PL10508-SP-27	AA017000024	screw	No	
PL10508-SP-28-V1	AA017000025	Blade clamp	No	
PL10508-SP-29	AA017000026	screw M5×7.3	No	
PL10508-SP-30	AA017000027	front base plate	No	
PL10508-SP-31	AA017000028	Scale indicator panel	No	
PL10508-SP-32	AA017000029	adjust knob holder	No	
PL10508-SP-33	AA017000030	ST screw 5*16	No	
PL10508-SP-34	AA017000031	adjust knob cover	No	


PL10508-SP-35	AA017000032	screw thread sleeve	No	
PL10508-SP-36	AA017000033	depth adjust spacer 12.5*20	No	
PL10508-SP-37	AA017000034	spring	No	
PL10508-SP-38	AA017000035	rear base plate	No	
PL10508-SP-39	AA017000036	Housing	No	
PL10508-SP-40	AA017000037	scale dial	No	
PL10508-SP-41	AA017000038	Plate locating sleeve	No	
PL10508-SP-42	A1010607000	BEARING 607	No	
PL10508-SP-43	AA017000039	Bearing cover	No	

PL10508-SP-44	AA017000040	ST screw 4.2*8	No	
PL10508-SP-45	AA017000041	safty guard spring	No	
PL10508-SP-46	AA017000042	Safety guard	No	
PL10508-SP-47	AA017000043	Motor cover	No	
PL10508-SP-48	AA017000044	ST screw 4.2*16	No	
PL10508-SP-49	AA017000045	Lable	No	
PL10508-SP-50	AA017000046	ST screw 4.2*16	No	
PL10508-SP-51	AA017000047	spring	No	
PL10508-SP-52	AA017C00048	Carbon Brush	No	
PL10508-SP-53	AA017000049	ST screw 2.9*10	No	

PL10508-SP-54	AA017000050	brush holder	No	
PL10508-SP-55	AA017000051	ST screw 3*15	No	
PL10508-SP-56	AA017000052	spring	No	
PL10508-SP-57	AA017000053	gauge pin	No	
PL10508-SP-58/70	AA017000054	Right/Left Handle	No	
PL10508-SP-59	AA017000055	ST screw 4.2*7	No	
PL10508-SP-60	AA017000056	spring	No	
PL10508-SP-61	AA017000057	Lock off button of switch	No	
PL10508-SP-62	AA017000058	right button cap	No	


PL10508-SP-63	AA017W00059	Switch	No	
PL10508-SP-64	AA017000060	Left button cap	No	
PL10508-SP-65	AA017000061	capacitor	No	
PL10508-SP-66	AA017000062	ST screw 4.2*13	No	
PL10508-SP-67	AA017000063	Cord clamp	No	
PL10508-SP-68	AA017000064	Cord guard	No	
PL10508-SP-69	A1002000001	Power cable 2M	No	
PL10508-SP-71	AA017000066	internal wire	No	
PL10508-SP-72	AA017000067	protect board	No	
PL10508-SP-73	AA017000068	Seal ring	No	
PL10508-SP-74	AA017000122	Screw	No	

PL10508-SP-75	AA017000123	Big Wheel Washer	No	
PL10508-SP-76	AA017000124	Pin	No	
PL10508-SP-77	AA017000125	Screw	No	
PL10508-SP-78	AA017000126	Inductor	No	

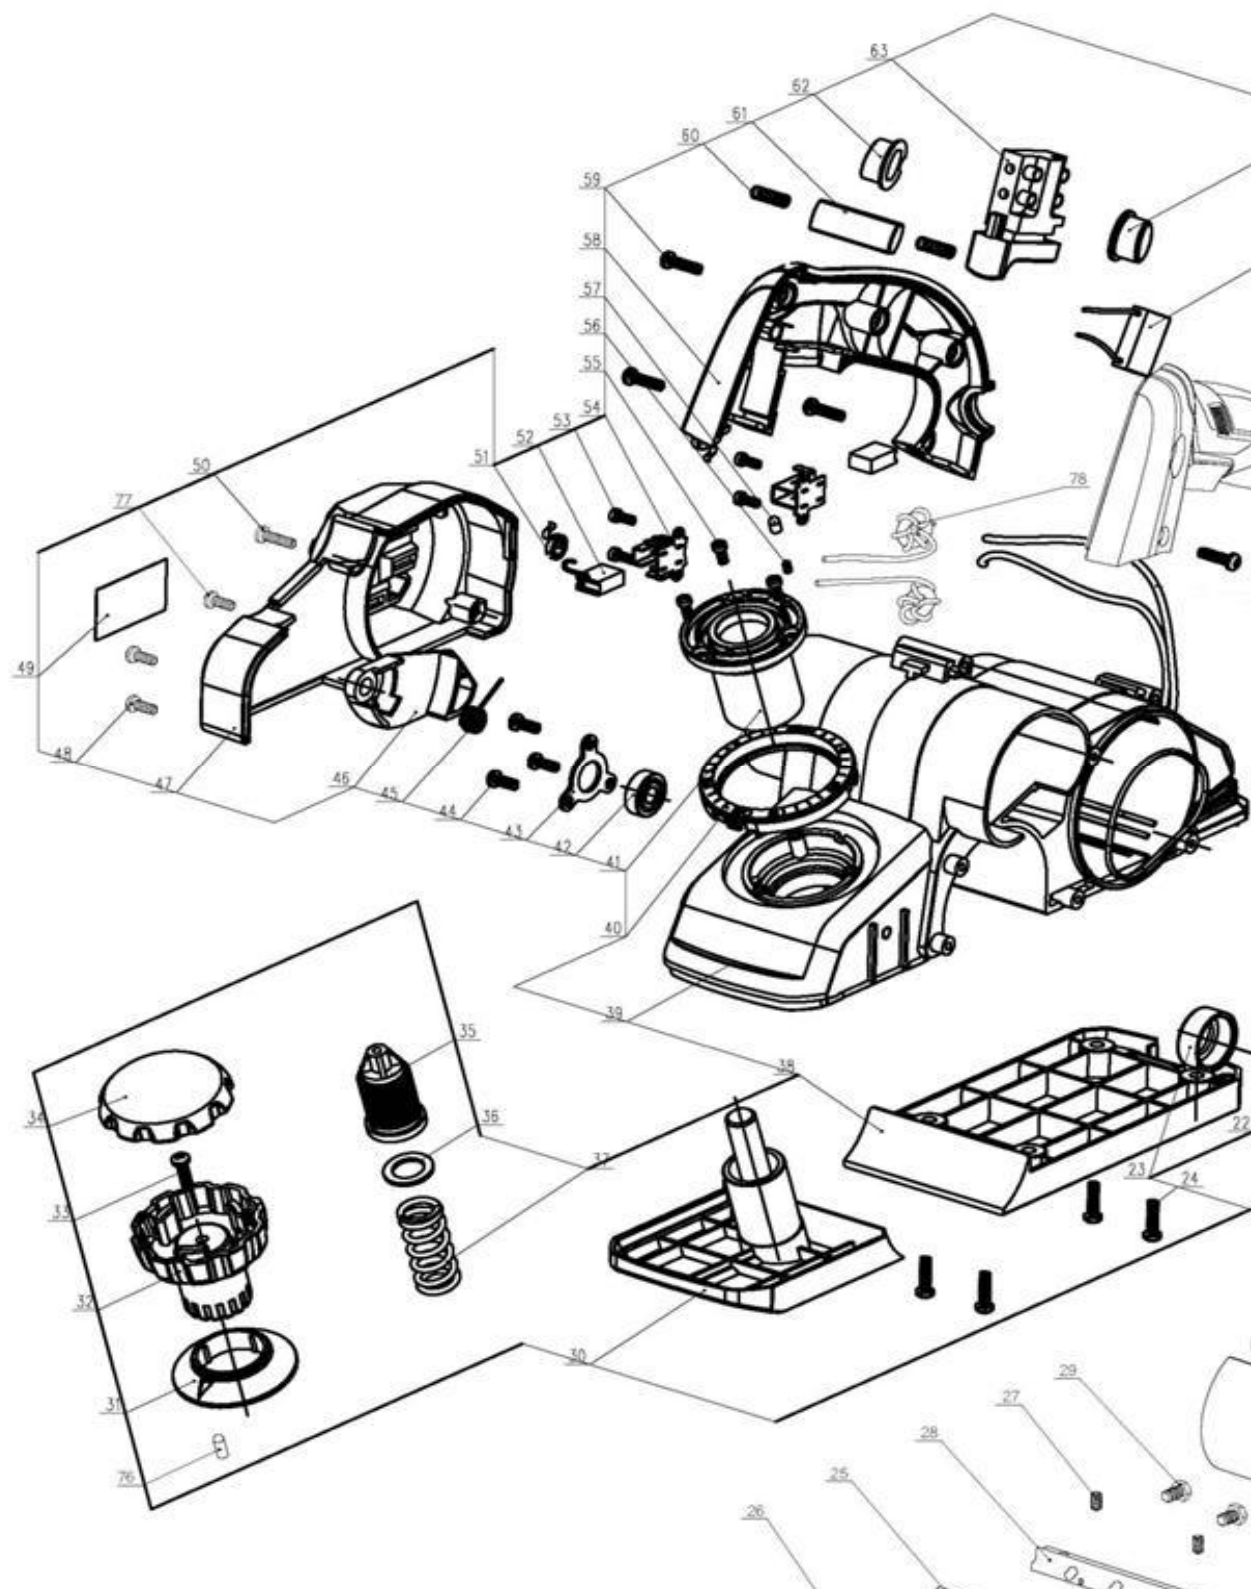 




PL10508

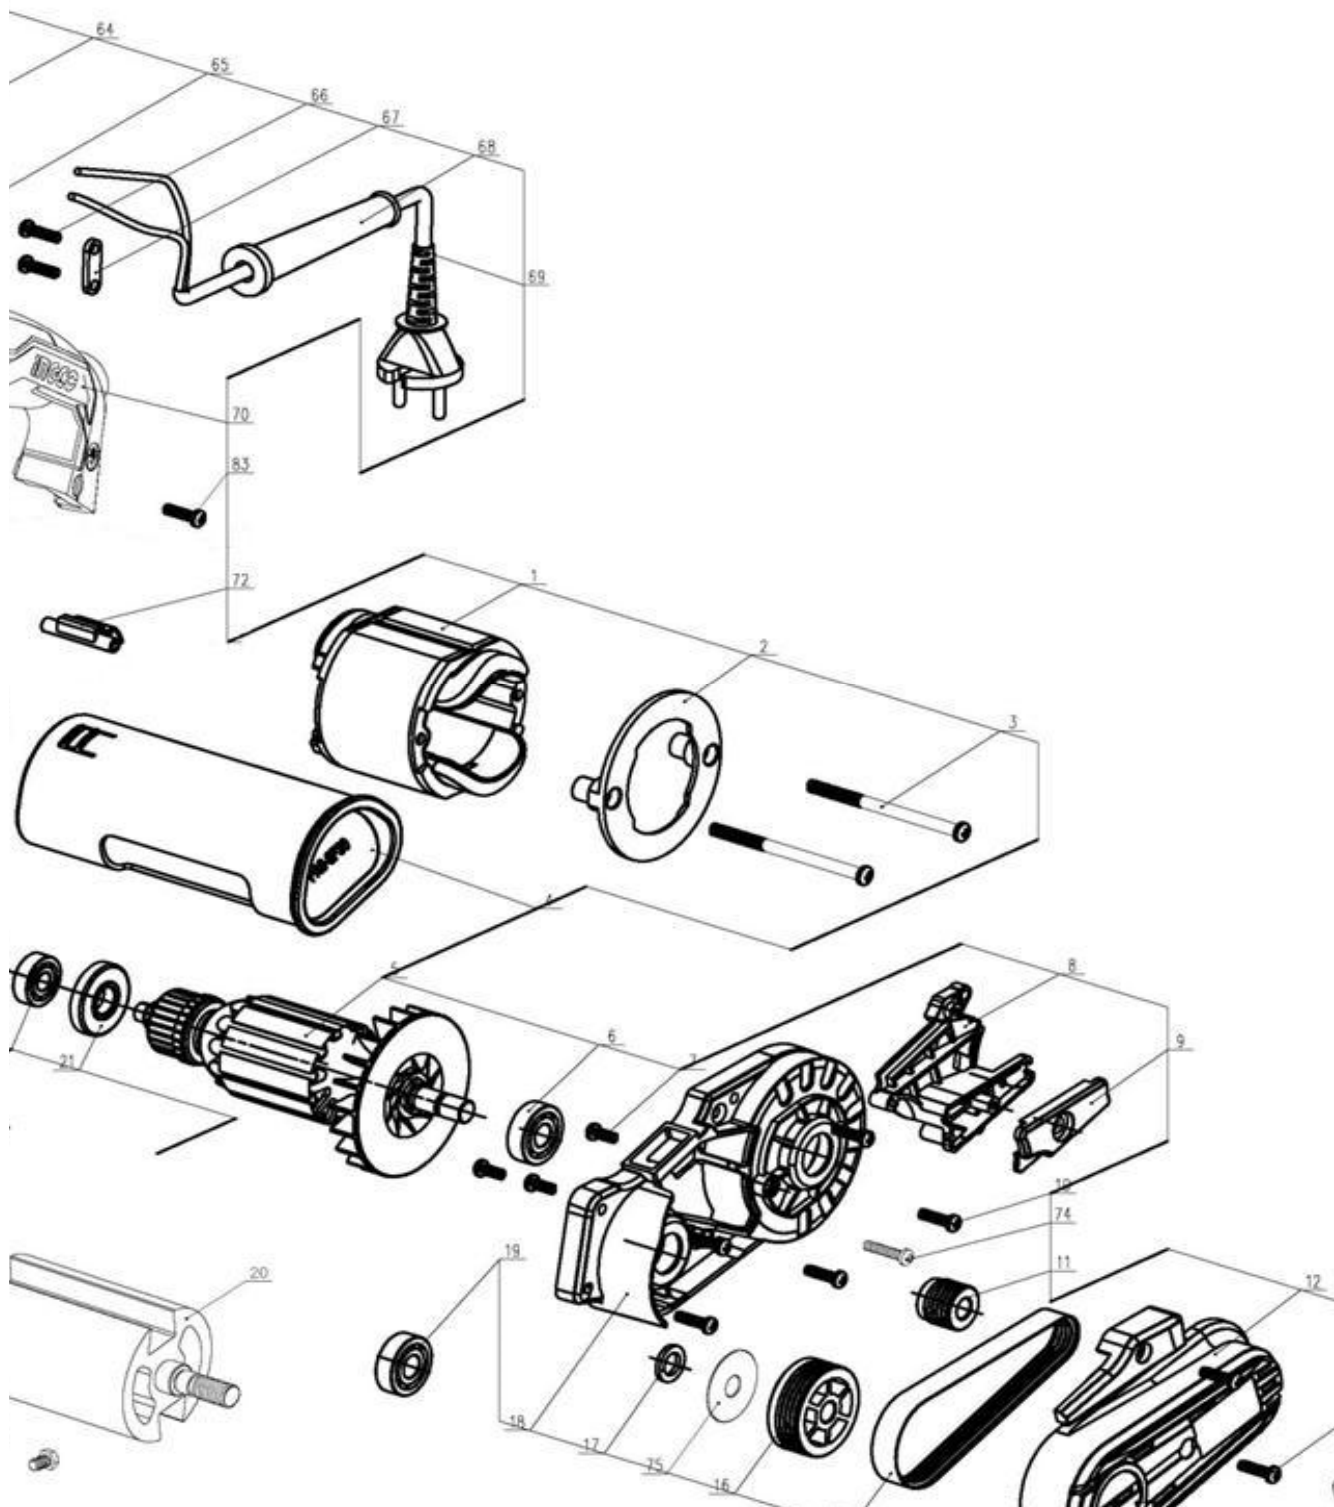 



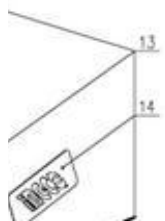 

✓