 
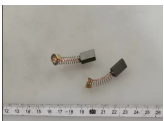 


PL7508

Spare Part No.	Part No.	Part Name	Easy Damage	Part Picture
PL7508-SP-S.B.A	TS00001720	Sharpening blade assembly	No	
PL7508-SP-2	DD00006022	Belt Cover	No	
PL7508-SP-3	DD00006023	Belt	No	
PL7508-SP-4	DD00006024	Small Wheel	No	
PL7508-SP-5	DD00006025	Big Wheel	No	
PL7508-SP-6	DD00006026	Screw	No	
PL7508-SP-7	DD00006027	Side Cover	No	
PL7508-SP-8	DD00006028	Bearing	No	
PL7508-SP-9	DD00006029	Rotor	No	
PL7508-SP-10	DD00006030	Cutter Holder	No	
PL7508-SP-11	DD00006031	Bearing	No	
PL7508-SP-12	DD00006032	Front Base Plate	No	
PL7508-SP-13	DD00006033	Collodion Cotton	No	

PL7508-SP-14	DD00006034	Spring	No	
PL7508-SP-15	DD00006035	Scale Dial	No	
PL7508-SP-16	DD00006036	Screw Thread Sleeve	No	
PL7508-SP-17	DD00006037	Adjust Knob Holder	No	
PL7508-SP-18	DD00006038	Screw	No	
PL7508-SP-19	DD00006039	Adjust Knob Cover	No	
PL7508-SP-20	DD00006040	Guide Ruler Knob	No	
PL7508-SP-21	DD00006041	Paralled Guide	No	
PL7508-SP-22	DD00006042	Spring Cap Compression Sp	No	
PL7508-SP-23	DD00006043	Gauge Pin	No	
PL7508-SP-24	DD00006044	Bearing Cover	No	
PL7508-SP-25	DD00006045	Screw	No	
PL7508-SP-26	DD00006046	Dust Suction Interface	No	
PL7508-SP-27	DD00006047	Screw	No	
PL7508-SP-28	DD00006048	Brush Holder Cover	No	
PL7508-SP-29	DD00006049	Corbon Brush	No	
PL7508-SP-30	DD00006050	Brush Holders	No	
PL7508-SP-31	DD00006051	Enclosure Assembly	No	
PL7508-SP-32	DD00006052	Cord Clamp	No	
PL7508-SP-33	DD00006053	Screw	No	
PL7508-SP-34	DD00006054	Cable Sleeve	No	
PL7508-SP-35	DD00006055	Screw	No	
PL7508-SP-36	DD00006056	Rear Base Plate	No	
PL7508-SP-37	DD00006057	Switch	No	
PL7508-SP-38	DD00006058	Cover As-Handle	No	
PL7508-SP-39	DD00006059	Wind Circle	No	
PL7508-SP-40	DD00006060	Screw	No	

PL7508-SP-41	DD00006061	Stator	No	
PL7508-SP-42	DD00006062	Washer	No	

PL7508

