

# LM385

| Spare Part No. | Part No.    | Part Name      | Easy Damage | Part Picture                                                                          |
|----------------|-------------|----------------|-------------|---------------------------------------------------------------------------------------|
| LM385-SP-1     | AA042000046 | Carring Handle | No          |    |
| LM385-SP-2     | DD00001408  | Up Cap         | No          |                                                                                       |
| LM385-SP-3     | AA042000048 | Tapping Screw  | No          |    |
| LM385-SP-4     | AA042C00049 | Carbon Brush   | No          |    |
| LM385-SP-4-13  | AA042000195 | Motor Assemble | No          |  |
| LM385-SP-5     | AA042000050 | Tapping Screw  | No          |  |
| LM385-SP-6     | AA042000051 | Motor Cap A    | No          |  |
| LM385-SP-7     | A1010608000 | Bearing 608    | No          |  |

|             |             |               |    |                                                                                       |
|-------------|-------------|---------------|----|---------------------------------------------------------------------------------------|
| LM385-SP-8  | AA042R00052 | Rotor         | No |    |
| LM385-SP-9  | AA042S00053 | Stator        | No |    |
| LM385-SP-10 | A1016000000 | bearing 6000  | No |    |
| LM385-SP-11 | AA042000054 | Motor Cap B   | No |  |
| LM385-SP-12 | AA042000055 | Fan           | No |  |
| LM385-SP-13 | AA042000056 | Belt Wheel- A | No |  |
| LM385-SP-14 | AA042000057 | Motor Seat    | No |  |

|             |             |                         |    |                                                                                       |
|-------------|-------------|-------------------------|----|---------------------------------------------------------------------------------------|
| LM385-SP-15 | AA042000058 | Tapping Screw           | No |    |
| LM385-SP-16 | AA042000059 | Break Ring              | No |    |
| LM385-SP-17 | AA042000060 | Cap                     | No |    |
| LM385-SP-18 | AA042000061 | C ring                  | No |    |
| LM385-SP-19 | A1010609000 | Bearing 609             | No |  |
| LM385-SP-20 | A1016002000 | Ball Bearing6002/C3-2Rz | No |  |
| LM385-SP-21 | AA042000062 | Band Brake              | No |  |
| LM385-SP-22 | AA042000063 | Break Spring            | No |  |

|             |             |                 |    |                                                                                       |
|-------------|-------------|-----------------|----|---------------------------------------------------------------------------------------|
| LM385-SP-23 | AA042000064 | Blade Driver    | No |    |
| LM385-SP-24 | AA042000065 | Belt Wheel- B   | No |    |
| LM385-SP-25 | AA042000066 | Tapping Screw   | No |    |
| LM385-SP-26 | AA042000067 | Washer          | No |    |
| LM385-SP-27 | AA042000068 | Rounded Cover   | No |   |
| LM385-SP-28 | AA042000069 | Ribbed Belt     | No |  |
| LM385-SP-29 | AA042000070 | Blade Orienting | No |  |

|             |             |             |    |                                                                                       |
|-------------|-------------|-------------|----|---------------------------------------------------------------------------------------|
| LM385-SP-30 | AA042000071 | Knife plate | No |    |
| LM385-SP-31 | AA042000072 | Blade Screw | No |    |
| LM385-SP-32 | AA042000073 | Base        | No |  |
| LM385-SP-33 | AA042000074 | Wheel axle  | No |  |
| LM385-SP-34 | AA042000075 | Wheel       | No |  |
| LM385-SP-35 | AA042000076 | Cover       | No |  |

 
|             |             |                 |    |                                                                                       |
|-------------|-------------|-----------------|----|---------------------------------------------------------------------------------------|
| LM385-SP-36 | AA042000077 | Wheel           | No |    |
| LM385-SP-37 | AA042000078 | Cord Clamp      | No |    |
| LM385-SP-38 | AA042000079 | Tortile spindle | No |    |
| LM385-SP-39 | AA042000080 | Tortile spring  | No |    |
| LM385-SP-40 | AA042000081 | Flap            | No |                                                                                       |
| LM385-SP-41 | AA042000082 | Orienting       | No |  |
| LM385-SP-42 | AA042000083 | Fixer           | No |                                                                                       |
| LM385-SP-43 | AA042000084 | Basketry Handle | No |  |
| LM385-SP-44 | AA042000085 | Basketry        | No |  |
| LM385-SP-45 | AA042000086 | Bend Pipe       | No |  |

|                |             |                     |    |                                                                                       |
|----------------|-------------|---------------------|----|---------------------------------------------------------------------------------------|
| LM385-SP-46    | AA042000087 | U Pipe              | No |    |
| LM385-SP-47    | AA042000088 | Knob                | No |    |
| LM385-SP-48    | AA042000089 | Bolt                | No |    |
| LM385-SP-49    | AA042000090 | Cable Clip          | No |    |
| LM385-SP-50/51 | AA042000174 | Cable 2*1.0mm 0.35m | No |   |
| LM385-SP-52    | AA042000091 | Button              | No |  |
| LM385-SP-53    | AA042000092 | Return spring I     | No |  |
| LM385-SP-54    | AA042000093 | Up Box              | No |                                                                                       |
| LM385-SP-55    | AA042000094 | Trigger             | No |  |
| LM385-SP-56    | AA042000095 | Capacitor           | No |  |

 
 
|             |             |                  |    |                                                                                       |
|-------------|-------------|------------------|----|---------------------------------------------------------------------------------------|
| LM385-SP-57 | AA042000096 | Down Box         | No |    |
| LM385-SP-58 | AA042000097 | Tapping Screw    | No |    |
| LM385-SP-59 | AA042000098 | Cord Armor       | No |    |
| LM385-SP-60 | AA042000175 | Main Switch      | No |    |
| LM385-SP-61 | AA042000099 | Cord Clamp       | No |  |
| LM385-SP-62 | AA042000100 | Return spring II | No |  |
| LM385-SP-63 | AA042000101 | Wheel axle       | No |  |
| LM385-SP-64 | AA042000102 | Tension Spring   | No |  |

|             |             |                            |    |                                                                                     |
|-------------|-------------|----------------------------|----|-------------------------------------------------------------------------------------|
| LM385-SP-65 | AA042000103 | Washer                     | No |  |
| LM385-SP-66 | AA042000104 | Sponge                     | No |  |
| LM385-SP-67 | AA042000105 | Seal single-sided adhesive | No |  |
| LM385-SP-68 | AA042000106 | Logo Label                 | No |                                                                                     |
| LM385-SP-69 | AA042000107 | Warning Label              | No |                                                                                     |
| LM385-SP-70 | AA042000108 | Data Label                 | No |                                                                                     |

# LM385

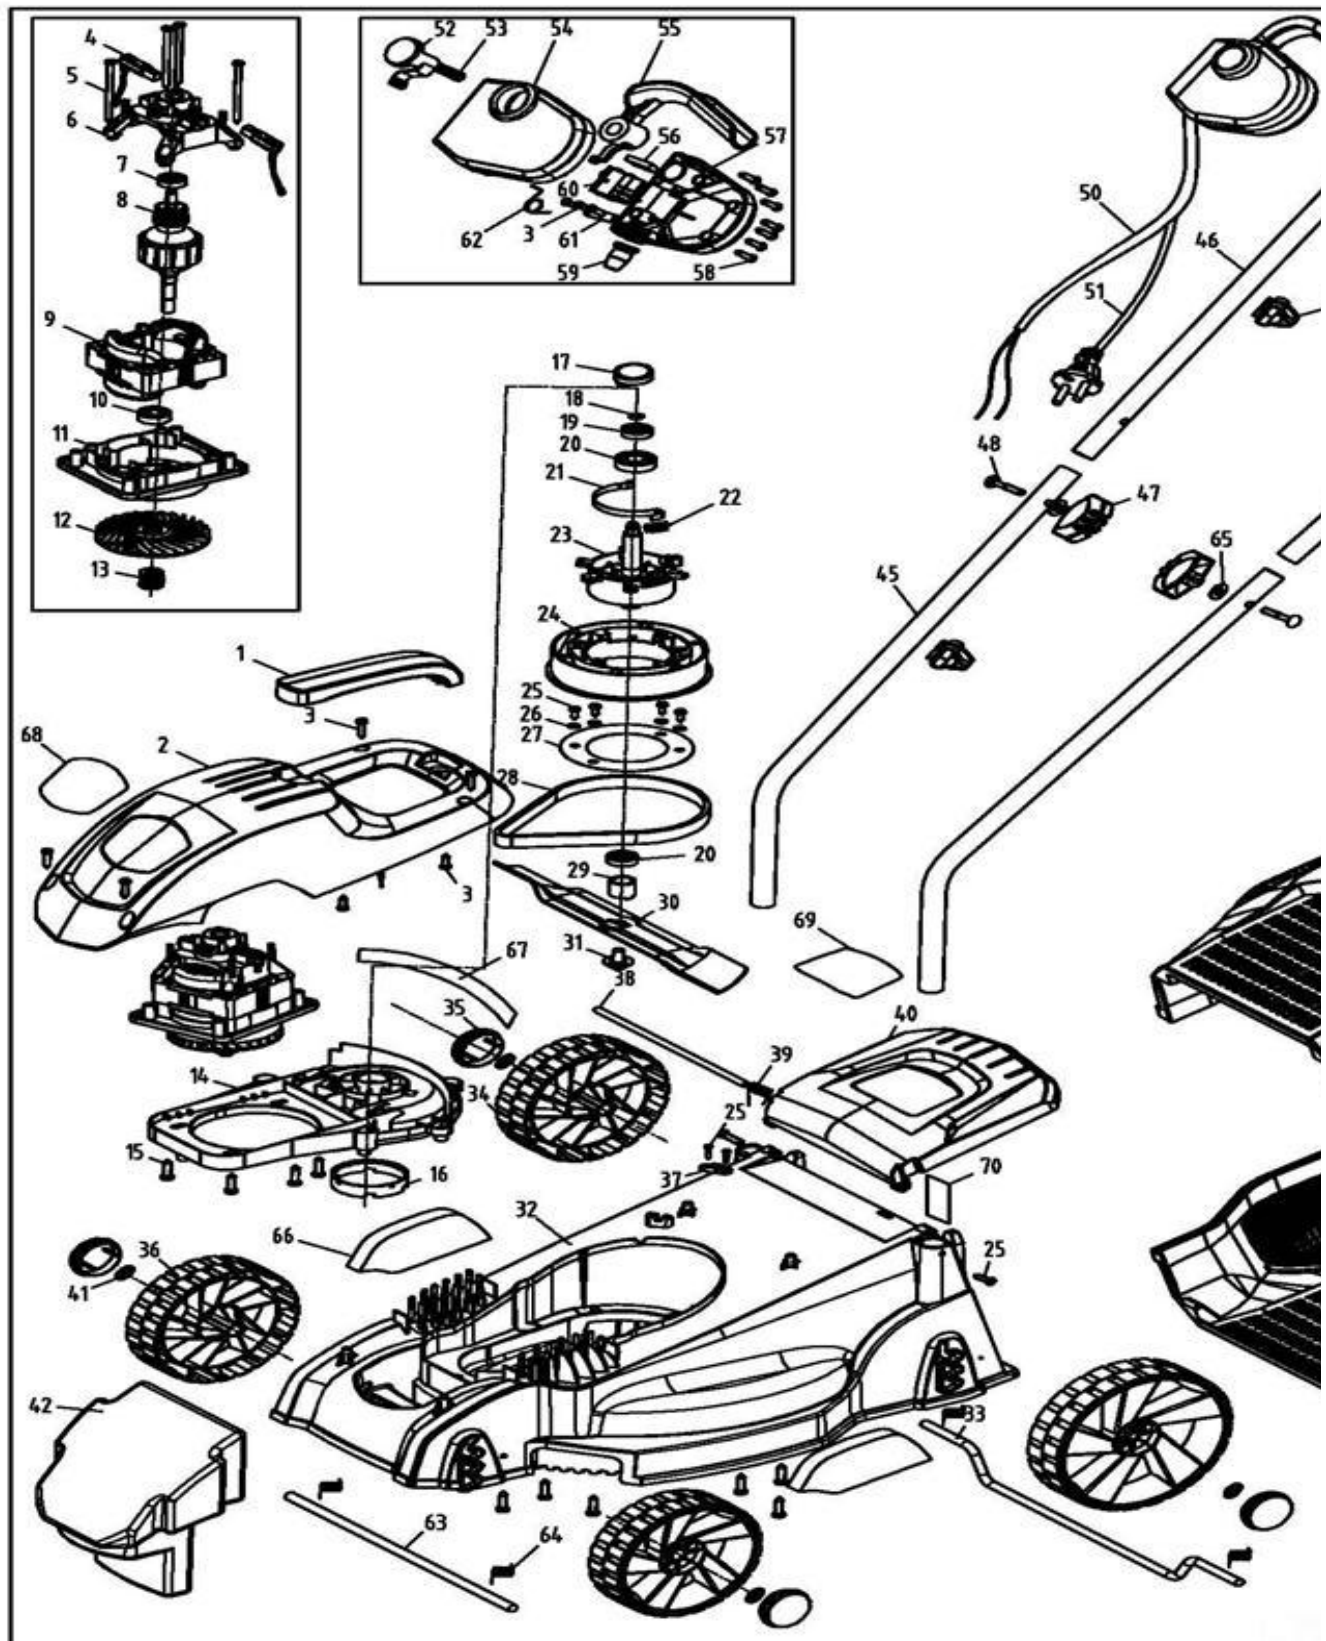



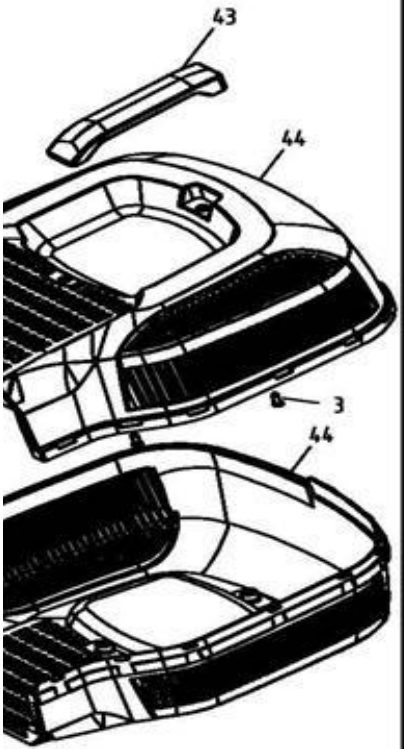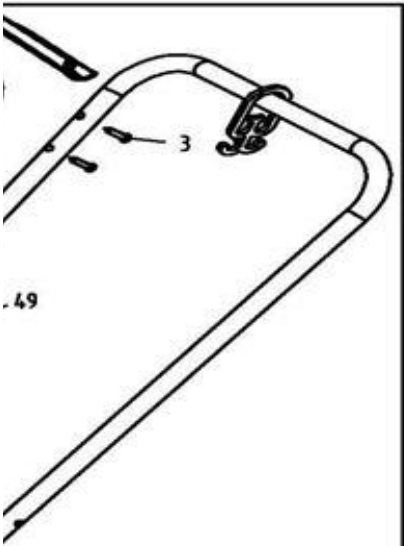

1. The first step is to identify the problem.