 
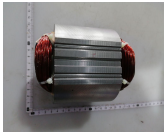 
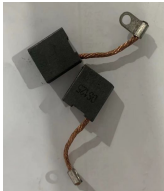 


DDM38001


Spare Part No.	Part No.	Part Name	Easy Damage	Part Picture
DDM38001-SP-1	DD00004322	Rotor	No	
DDM38001-SP-2	DD00004323	Bearing 6300RS	No	
DDM38001-SP-3	DD00004324	Ring	No	
DDM38001-SP-4	DD00004325	Screw M6X10	No	
DDM38001-SP-5	DD00004326	Fan guard	No	
DDM38001-SP-6	DD00004327	stator component	No	
DDM38001-SP-7	DD00004328	Casing lined with	No	
DDM38001-SP-8	DD00004329	Insulation sleeve post	No	
DDM38001-SP-9	DD00004842	Housing	No	
DDM38001-SP-1	DD00004331	Screw M6X50	No	
DDM38001-SP-1	DD00004332	Carbon brush holder	No	
DDM38001-SP-1	DD00004333	Screw M4X7	No	
DDM38001-SP-1	DD00004334	Carbon Brush	No	
DDM38001-SP-1	DD00004335	Carbon brush coil spring	No	
DDM38001-SP-1	DD00004336	Hex nutM5	No	
DDM38001-SP-1	DD00004337	Inner lining of the back cover	No	
DDM38001-SP-1	DD00004338	Casing back cover	No	
DDM38001-SP-1	DD00004339	Screw M5X25	No	
DDM38001-SP-1	DD00004340	Screw M6X8	No	
DDM38001-SP-2	DD00004341	Spring washers	No	
DDM38001-SP-2	DD00004342	Brush box cover	No	
DDM38001-SP-2	DD00004343	control component	No	
DDM38001-SP-2	DD00004344	power supply box body	No	
DDM38001-SP-2	DD00004345	Waterproof cable connector	No	
DDM38001-SP-2	DD00004346	cable	No	
DDM38001-SP-2	DD00004347	Screw M5X35	No	
DDM38001-SP-2	DD00004348	Switch	No	
DDM38001-SP-2	DD00004349	Bearing 6202RS	No	
DDM38001-SP-2	DD00004350	gear box	No	
DDM38001-SP-3	DD00004351	Bearing 6002RS	No	
DDM38001-SP-3	DD00004352	Bearing 6201RS	No	
DDM38001-SP-3	DD00004353	Nut 16	No	


DDM38001-SP-3	DD00004354	Short limit set	No	
DDM38001-SP-3	DD00004355	Ring	No	
DDM38001-SP-3	DD00004356	Pressing plate	No	
DDM38001-SP-3	DD00004357	Friction plate	No	
DDM38001-SP-3	DD00004358	Big gear	No	
DDM38001-SP-3	DD00004359	Axis	No	
DDM38001-SP-3	DD00004360	Big gear	No	
DDM38001-SP-4	DD00004361	Limit set in the	No	
DDM38001-SP-4	DD00004362	Gear shaft	No	
DDM38001-SP-4	DD00004363	Flat key	No	
DDM38001-SP-4	DD00004364	Gear shaft	No	
DDM38001-SP-4	DD00004365	Retainer ring	No	
DDM38001-SP-4	DD00004366	Big gear	No	
DDM38001-SP-4	DD00004367	Long limit set	No	
DDM38001-SP-4	DD00004368	gear box	No	
DDM38001-SP-4	DD00004369	Bearing 6206RS	No	
DDM38001-SP-4	DD00004370	output shaft	No	
DDM38001-SP-5	DD00004371	Connecting flange	No	
DDM38001-SP-5	DD00004372	Ring	No	
DDM38001-SP-5	DD00004373	Ring	No	
DDM38001-SP-5	DD00004374	Sealing ring	No	
DDM38001-SP-5	DD00004375	faucet	No	
DDM38001-SP-5	DD00004376	TC skeleton oil seal	No	
DDM38001-SP-5	DD00004377	Ring	No	
DDM38001-SP-5	DD00004378	Screw M5X25	No	
DDM38001-SP-5	DD00004379	Flat washer	No	
DDM38001-SP-5	DD00004380	Screw M6X40	No	
DDM38001-SP-6	DD00004843	Rocker arm ball	No	
DDM38001-SP-6	DD00004382	Rocker arm	No	
DDM38001-SP-6	DD00004383	Screw M8X25	No	
DDM38001-SP-6	DD00004384	Rocker-arm link	No	
DDM38001-SP-6	DD00004385	Retainer ring	No	
DDM38001-SP-6	DD00004386	Bearing 6003RS	No	
DDM38001-SP-6	DD00004387	Straight teeth axis	No	
DDM38001-SP-6	DD00004388	Flat key	No	
DDM38001-SP-6	DD00004389	Lock knob	No	
DDM38001-SP-6	DD00004390	Hex nut	No	
DDM38001-SP-7	DD00004391	Screw M8X30	No	
DDM38001-SP-7	DD00004392	slide body	No	
DDM38001-SP-7	DD00004393	Plate 1	No	
DDM38001-SP-7	DD00004394	Clamp sheet	No	
DDM38001-SP-7	DD00004395	Support column	No	
DDM38001-SP-7	DD00004396	Lifting bolt	No	
DDM38001-SP-7	DD00004397	Screw M8X30	No	
DDM38001-SP-7	DD00004398	Plate 2	No	
DDM38001-SP-7	DD00004399	Screw M4X8	No	
DDM38001-SP-7	DD00004400	Sliding cover	No	


DDM38001-SP-8	DD00004401	Handle	No	
DDM38001-SP-8	DD00004402	Bolt M12X80	No	
DDM38001-SP-8	DD00004403	base panel	No	
DDM38001-SP-8	DD00004404	Hex nut	No	
DDM38001-SP-8	DD00004405	Base	No	
DDM38001-SP-8	DD00004406	Spacing sleeve	No	
DDM38001-SP-8	DD00004407	Flat mat	No	
DDM38001-SP-8	DD00004408	Bolt M12X80	No	




DDM38001

      0-000EZEI

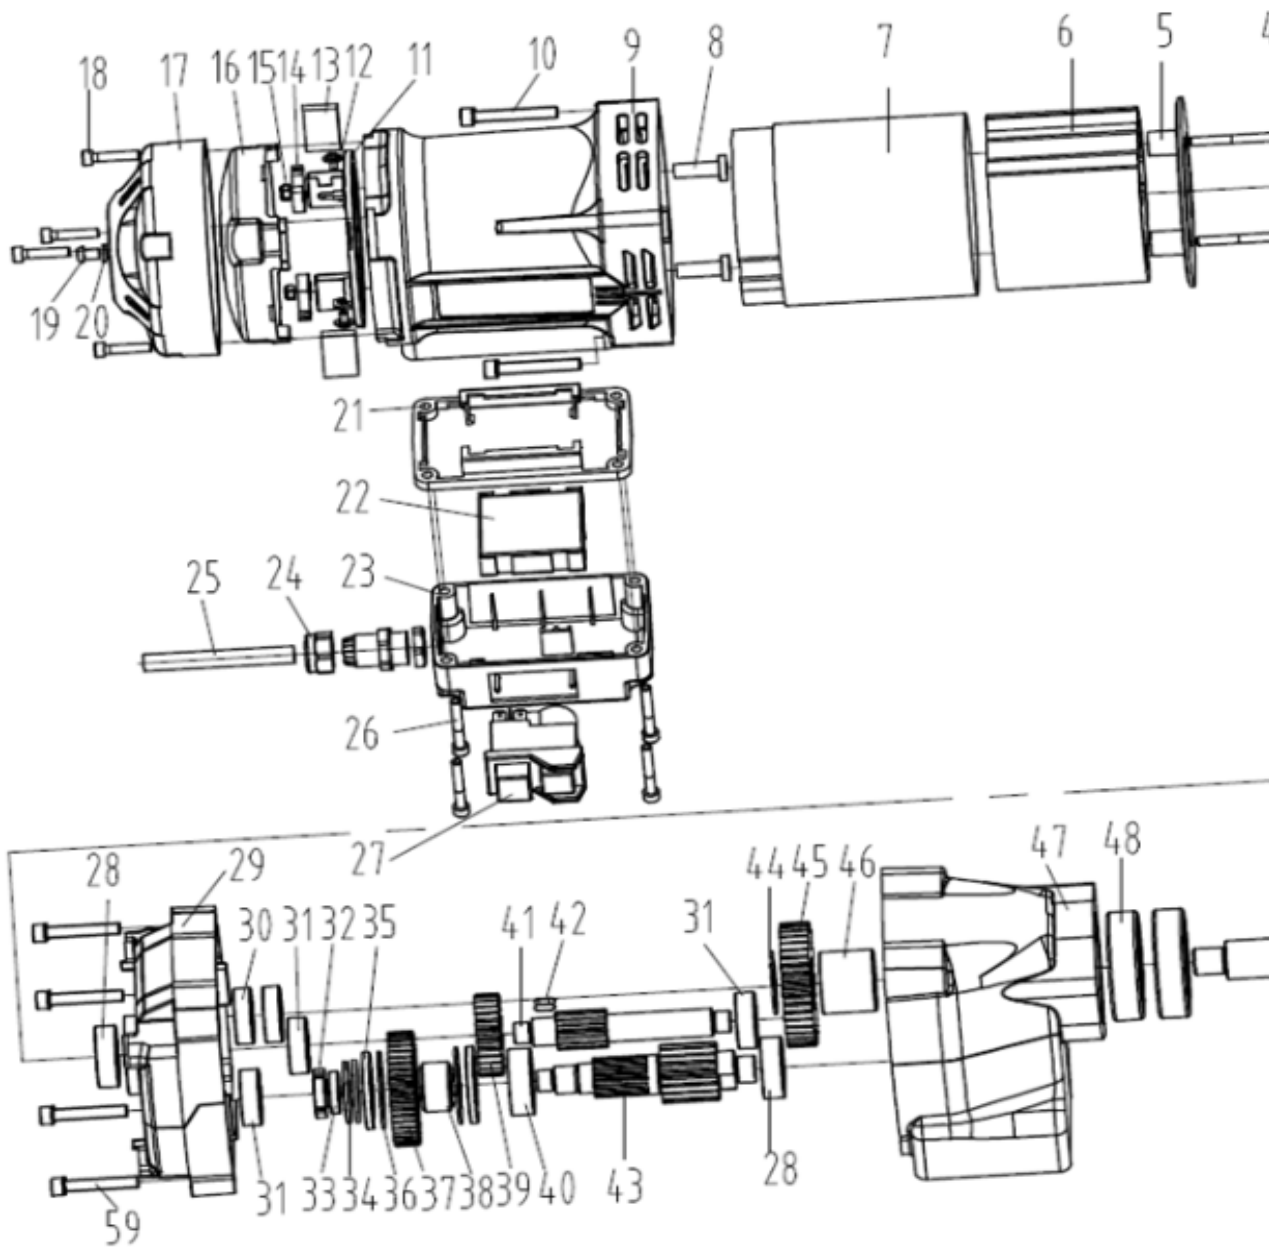

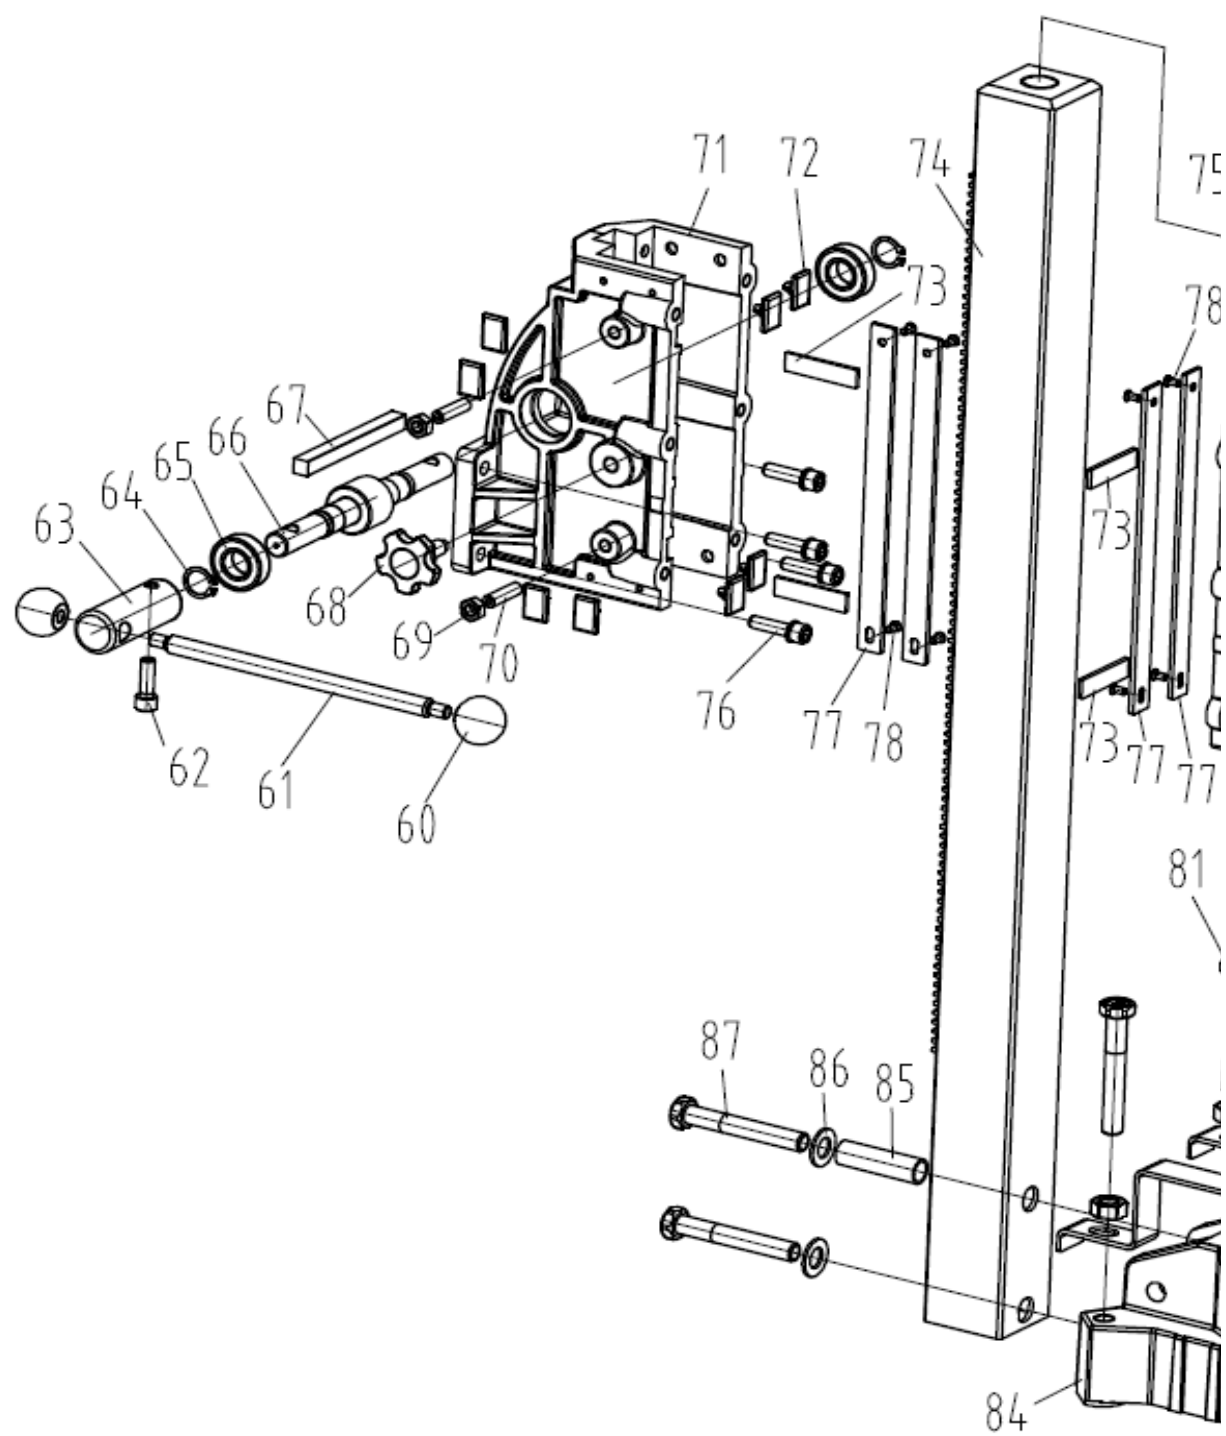

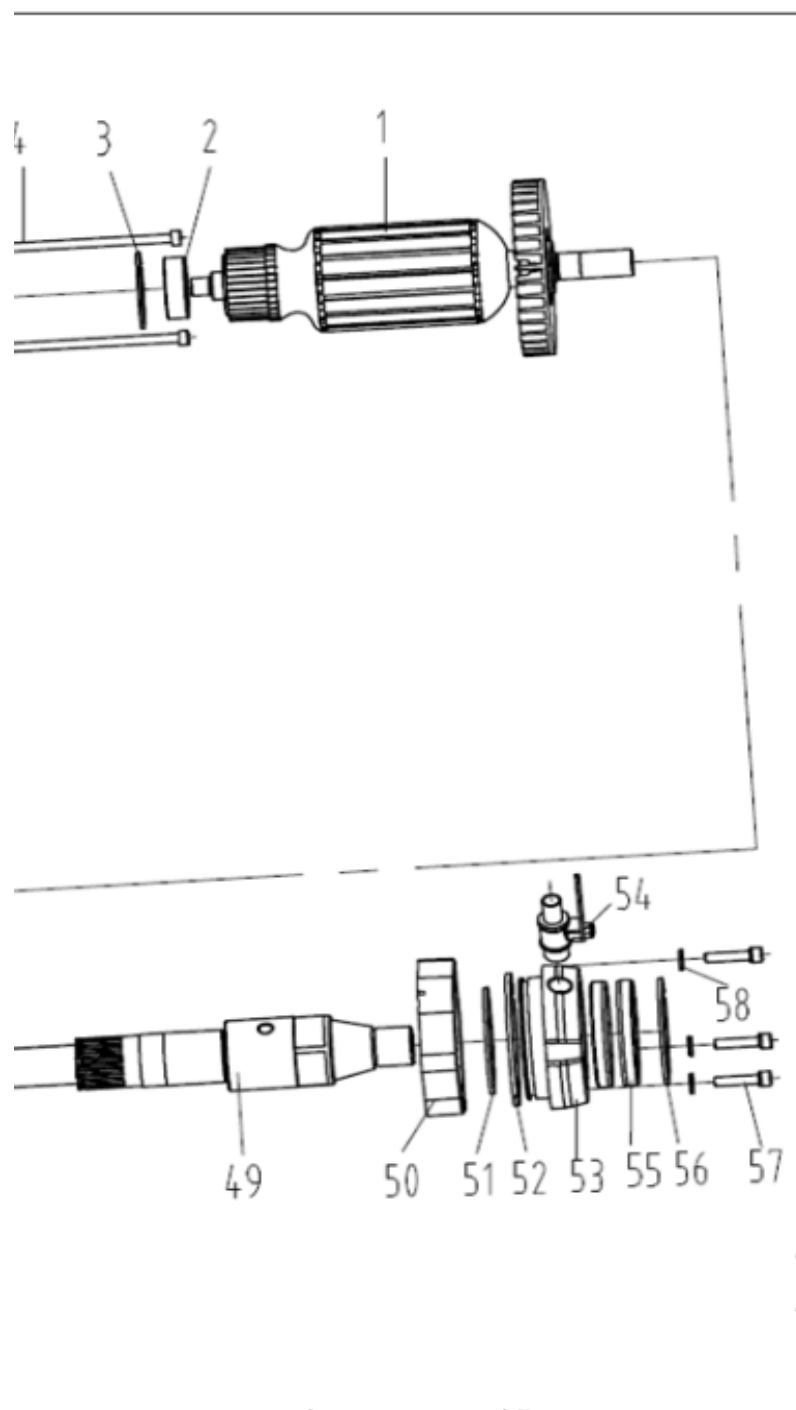

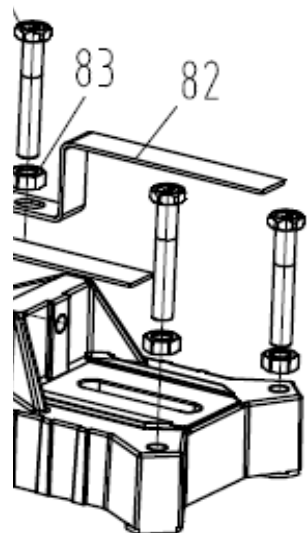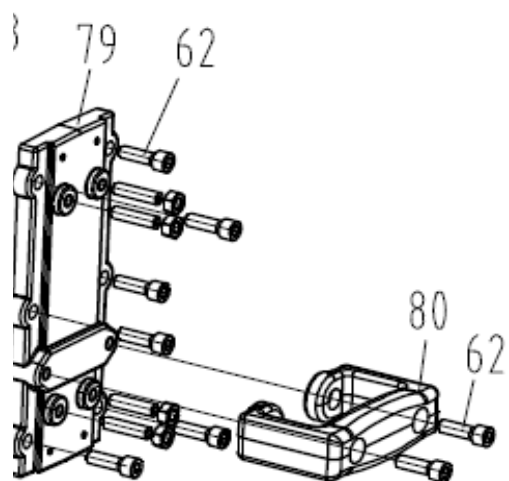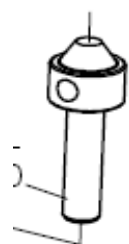

制图	校核	审核	更改文件号	
设计	曹国刚	2019.8.7	张	