 
 
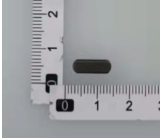 


Spare Part No.	Part No.	Part Name	Easy Damage	Part Picture
PDB13008-SP-WRENCH	AA023000560	Wrench	No	
PDB13008-SP-1/2/3/4/5/8	TSTY39	Pin system data	No	
PDB13008-SP-1-5/8	AA023000472	headstrong 0845B	No	
PDB13008-SP-5	AA021000232	Stell Ball 7.94	No	
PDB13008-SP-6/7	AA023000517	screw M8*35/washer8	No	
PDB13008-SP-9	AA023000481	buffer ring	No	
PDB13008-SP-10	AA023000487	impact hammer 0811C	No	
PDB13008-SP-11	AA023000518	hammer washerDG0845B	No	
PDB13008-SP-12	AA023000473	buffer ring 45DG、FMR	No	

 
PDB13008-SP-13	AA023000488	flat washer25*37*1 DG08110	No	
PDB13008-SP-14	AA023000489	O-ring 22.5*5 DG0845B	No	
PDB13008-SP-15	AA023000490	O-ring 41.5*2	No	
PDB13008-SP-16	AA023000519	cylinder 0845K 40Cr	No	
PDB13008-SP-17	AA023000520	cylinder ring DG0845B	No	
PDB13008-SP-18/19	AA023000521	Screw M8*35/Spring washer	No	
PDB13008-SP-20	AA023000522	cylinder house 0845K	No	
PDB13008-SP-21	AA023000523	cylinder house washer	No	

 
PDB13008-SP-22	AA023000524	rammer DG0845K	No	
PDB13008-SP-23	AA023000474	O- ring 28*3.6	No	
PDB13008-SP-23-25	DD00005135	piston group	No	
PDB13008-SP-24	AA023000475	piston pin	No	
PDB13008-SP-25	AA023000476	piston	No	
PDB13008-SP-26/27	AA023000477	needling bearing/connecting	No	
PDB13008-SP-28	AA023000478	oil cover	No	
PDB13008-SP-29	AA023000491	O-ring 48*2.2	No	

PDB13008-SP-30	AA023000525	eccentric shaft	No	
PDB13008-SP-31	AA023000526	half round key	No	
PDB13008-SP-32	AA021000271	Ring 17	No	
PDB13008-SP-33	AA023000527	bearing 6303-RS	No	
PDB13008-SP-34	AA023000528	O-Ring 46.2*2	No	
PDB13008-SP-35	AA023000529	gear box	No	
PDB13008-SP-36	AA023000530	position sleeve	No	
PDB13008-SP-37	AA023000531	oil seal FB22*30*6	No	
PDB13008-SP-38	AA000000030	Gear	No	

 
PDB13008-SP-39	A1016001000	Ball Bearing 6001/C3-Zrs	No	
PDB13008-SP-40	AA023000532	Inner Cover	No	
PDB13008-SP-41	AA023000533	anti-oil washer 0810C	No	
PDB13008-SP-42	A1016201000	Bearing 6201	No	
PDB13008-SP-43	AA023000534	Washer 12*24*2	No	
PDB13008-SP-44	AA023000535	Bearing Board	No	
PDB13008-SP-45/46/47	AA023000536	Flat /Spring Washer4 /Screw	No	
PDB13008-SP-48	AA000000005	Rotor	No	

 
PDB13008-SP-49	A1010608000	Bearing 608	No	
PDB13008-SP-50	AA000000074	fan guide	No	
PDB13008-SP-51	AA023000537	Screw ST4.8*58	No	
PDB13008-SP-52	AA000000006	Stator	No	
PDB13008-SP-53	AA023000479	tension spring	No	
PDB13008-SP-54	AA023000538	House	No	
PDB13008-SP-55/56/57	AA023000539	flat /spring washer6 /screw	No	
PDB13008-SP-58/60	AA023000482	brush holder/brush cover	No	

PDB13008-SP-59	AA000000031	Carbon Brush	No	
PDB13008-SP-61	AA023000483	back cover	No	
PDB13008-SP-62	AA023000540	Screw ST3.9*16	No	
PDB13008-SP-63	AA023000541	Screw M8*50	No	
PDB13008-SP-64/74	AA023000542	left/right handle	No	
PDB13008-SP-65	AA023000543	anti-vibration sleeve	No	
PDB13008-SP-66	AA023000544	anti-vibration spring	No	
PDB13008-SP-67	AA023000545	Anti-vibration board	No	

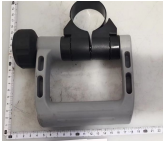PDB13008-SP-68	AA023000546	Anti-Vibration Screwm8*35	No	
PDB13008-SP-69	AA000000032	Switch	No	
PDB13008-SP-70	AA021000290	Capactitor	No	
PDB13008-SP-71	AA021000292	Cable Board	No	
PDB13008-SP-72	AA023000547	Cable 2X1Mm2 2M	No	
PDB13008-SP-73	AA021000293	Cable Cover	No	
PDB13008-SP-75	AA023000548	Nut M8	No	
PDB13008-SP-76	AA023000549	Screw St4.2*18	No	
PDB13008-SP-77	AA023000550	rotary knob	No	
PDB13008-SP-77-82	DD00005137	Auxiliary handle assembly	No	

PDB13008-SP-78	AA023000551	auxiliary handle	No	
PDB13008-SP-79	AA023000552	knob set	No	
PDB13008-SP-80	AA023000553	clamp set	No	
PDB13008-SP-81	AA023000480	hoop	No	
PDB13008-SP-82	AA023000554	screw M8*140	No	
PDB13008-SP-83	AA023000556	Washer8.1*21*0.5	No	

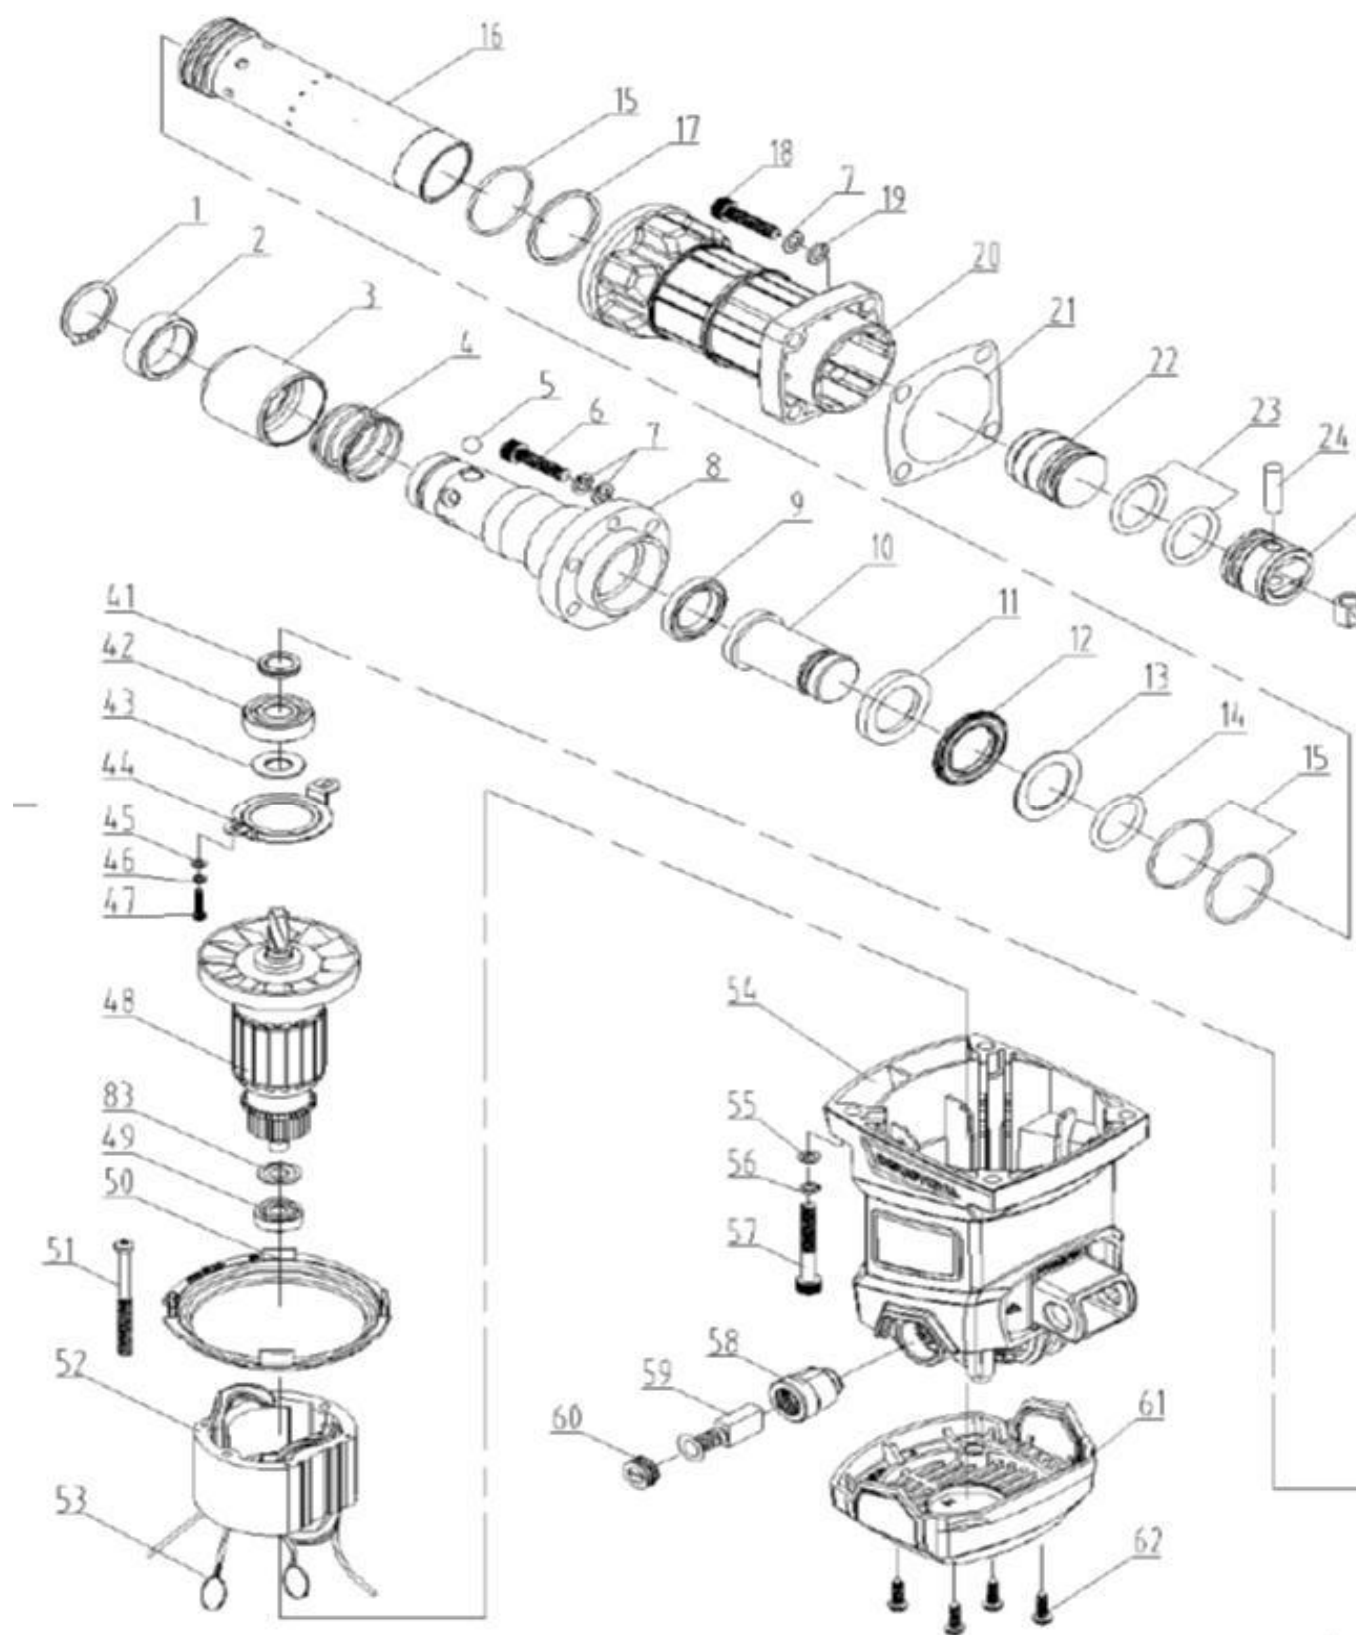

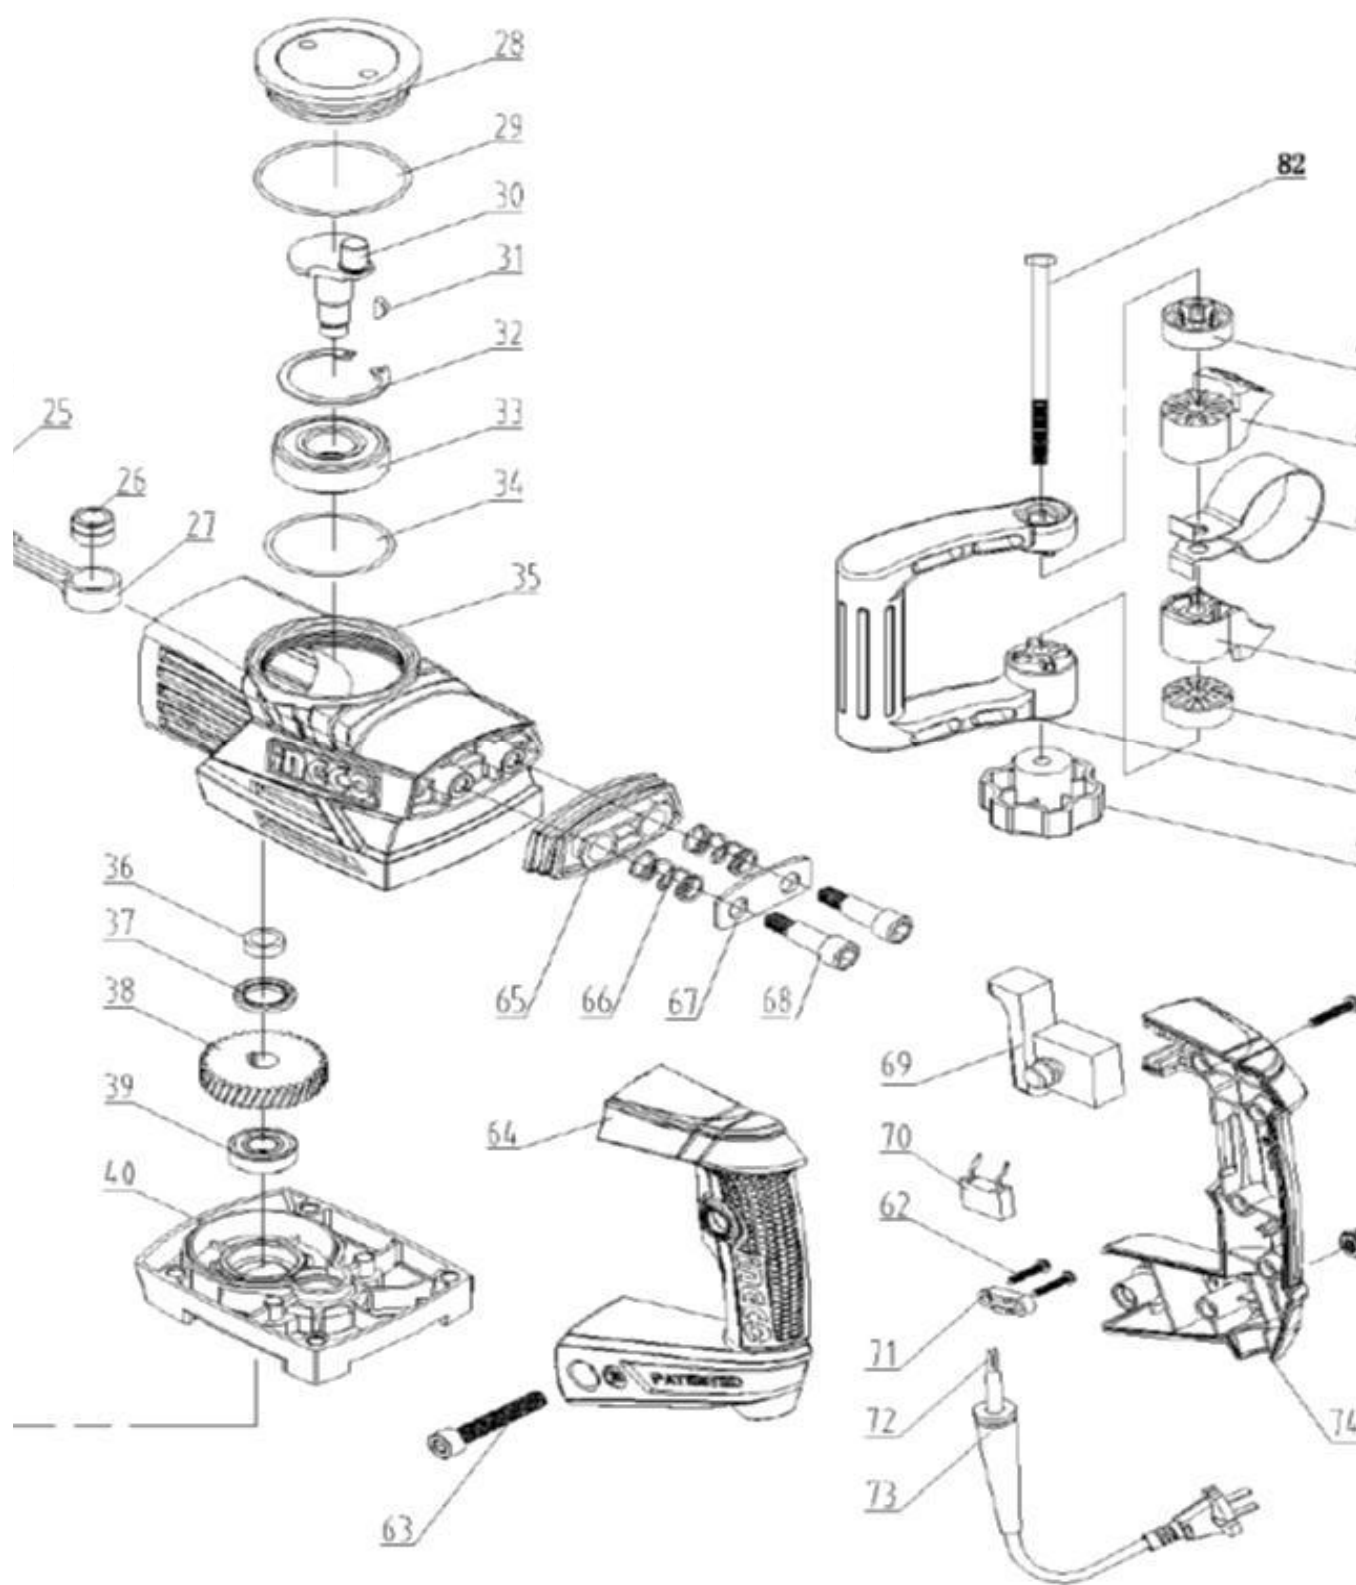

79

80

81

80

79 —

78

77

76

75